OPGAL
Beyond the Visible

www.opgal.com

EyeCGas®
OGI (Optical Gas Imager)

Infrared Gas Leak Detection System

User's Manual

Distributed By:

HEATH CONSULTANTS

9030 Monroe Road
Houston, TX 77061
1-713-844-1300
1-800-HEATH-US
www.heathus.com

Main Sections

1 CHANGES AND REVISIONS 4
2 CONGRATULATIONS 5
3 WARNINGS & CAUTIONS 5
TABLE OF CONTENTS 6
TABLE OF FIGURES ..... ERROR! BOOKMARK NOT DEFINED.
4 PACKING LIST 10
5 SYSTEM OVERVIEW 11
6 EYECGAS® CONTROLS AND OPERATION 17
7 EYECGAS® SOFTWARE "ARTSOFT" 33
8 CONNECTIVITY TO OTHER DEVICES 39
9 TROUBLESHOOTING / MAINTENANCE 40
10 OPGAL 41
11 TECHNICAL SUPPORT / SERVICE 42
12 WARRANTY 43
APPENDIX A - ARTSOFT INSTALLATION 44
APPENDIX B –SPECIFICATION 62
APPENDIX C – PROCEDURE FOR CHANGING BATTERY IN FIELD 63
APPENDIX D – PROCEDURE FOR CHANGING LENS IN FIELD 64
APPENDIX E - CERTIFICATIONS 65

NOTICE

The content of this user's manual are proprietary to **Opgal Optronic Industries Ltd**. Reproduction in whole or in part of this manual is prohibited without the express written consent of **Opgal Optronic Industries Ltd.**

Opgal Optronic Industries Ltd. operates under a continual product improvement program and reserves the right to make improvements and or changes without prior notification. This manual supersedes all previous manuals for this instrument.

EyeCGas is an **Opgal Optronic Industries Ltd.** registered trademark.

© COPYRIGHT 2011 Opgal Optronic Industries Ltd. All rights reserved.

Changes and Revisions

Revision	Description	Reference	Date	Approved by
A	Release			
B				
C	Adding appendix D and E		14/10/12	Elad Vekstain
D	Deleting items Tripod, Monopod and bag pack from table 1		8/7/13	Elad Vekstain
	Adding items 11 and 12 in table 1		8/7/13	Elad Vekstain
	Updating Figure 6 of Glare shield		8/7/13	Elad Vekstain
	Adding para. 5.10.1 and 5.10.2		8/7/13	Elad Vekstain
	Updating figure 1		3/9/13	Elad Vekstain
E	Updating referral	6.1.3.4	17/6/15	Elad Vekstain
	Updating referral	6.1.5.11-3	17/6/15	Elad Vekstain
	Adding new item	4		
	Update figures		17/6/15	Elad Vekstain

Congratulations

Congratulations on the purchase of your EyeCGas®™ Infrared Camera. The new Opgal EyeCGas® combines the latest in infrared technology with an innovative product design to bring you the first handheld infrared camera engineered specifically for use in gas leak detection. The innovative, easy-to-use interface on EyeCGas® enables users to begin achieving results immediately.

The benefits of using infrared technology as a tool for gas leak detection are many. Several particularly notable benefits include increased worker safety, reduced environmental emissions, and substantial financial savings as a result of leak detection and remediation. Some of the many uses for your EyeCGas® camera include:

- Maintenance
- Plant survey inspection
- On line update of database
- Documentation of the surveyed inspection with the recorded video data

NOTE:
To ensure that we are able to reach you with any product or software updates, please fill out the warranty card enclosed with your EyeCGas® Infrared Camera.

Warnings & Cautions

Warning

1.1.1 Li-ion Batteries

You must read these safety instructions and warnings before using or charging your batteries.

Lithium Polymer and Li-ion batteries are volatile. Failure to read and follow the below instructions may result in fire, personal injury and damage to property if charged or used improperly.

CAUTION
DO NOT EXPOSE THE BATTERY TO TEMPERATURES ABOVE 60°C (140°F). Do not disassemble. To be used only with the EyeCGas® camera. Use only the supplied battery charger. FAILURE TO FOLLOW these instructions may present risk of explosion or fire. THIS USER'S MANUAL INCLUDES ADDITIONAL SAFETY INSTRUCTIONS WHICH MUST BE OBSERVED AND FOLLOWED.

WARNING
Read all instructions and warnings before using this product. Your EyeCGas® Infrared Camera is like any other tool. It must be used properly and safely. All users should be trained on the proper and safe use of infrared imaging prior to using the EyeCGas® Infrared Camera. This is especially important for users who may use the product in potentially hazardous or explosive environments. Failure to follow this information could result in death or serious injury.

Caution

Battery handling and charging, heat, laser or energy sources, moisture or rain ingress, shocks and drops, fire, temperature range, cleaning procedures, maintenance, etc..

Table of Contents

1 CHANGES AND REVISIONS 4

2 CONGRATULATIONS 5

3 WARNINGS & CAUTIONS 5

3.1 Warning 5

3.1.1 Li-ion Batteries 5

3.2 Caution 5

TABLE OF CONTENTS 6

TABLE OF FIGURES ..... ERROR! BOOKMARK NOT DEFINED.

4 PACKING LIST 10

5 SYSTEM OVERVIEW 11

5.1 EyeCGas® Camera- P/N 8G9A0000A 11

5.2 EyeCGas® Carrying Case 11

5.3 ArtSoft CD Software for EyeCGas® 11

5.4 Batteries X 3 12

5.5 Battery Charger 12

5.6 Glare Shield 12

5.7 Shoulder Strap 13

5.8 USB Boost cable and USB A to Mini USB B Cable 13

5.9 Head Set 13

5.10 Lens Cleaning Kit 13

5.11 AC Adapter 14

5.12 Optional Accessories 14

5.12.1 75mm f/1.2 Manual Athermal. Lens Assy. 14

5.12.2 BATTERY POWER SUPPLY KIT 14

5.12.3 BNC Video Adapter 14

5.13 Features 15

5.13.1 DVR - Digital Video Recorder 15

5.13.2 CCD –Video Camera 15

5.14 Battery Charging 16

5.15 EyeCGas® Initial Operation 16

6 EYECGAS® CONTROLS AND OPERATION 17

6.1 Controls and Display 17

6.1.1 Front Panel 17

6.1.1.1 3.5" Color LCD Display 17

6.1.1.2 Battery Status LEDs 17

6.1.1.3 Camera Warning Indicator 17

6.1.1.4 USB2 Connector 17

6.1.1.5 Accessories Connector 17

6.1.2 EyeCGas® Components 18

6.1.3 Keypad Buttons and connectors 18

6.1.3.1 NUC 18

6.1.3.2 Polarity 18

6.1.3.3 Visible / Infrared 18

6.1.3.4 Menu /Select 19

6.1.3.5 Mode 19

6.1.3.6 Record / Stop 19

6.1.3.7 Zoom 19

6.1.4 Menu and Keypad Map 20

6.1.5 Setup Menu 21

6.1.5.1 File Manager 21

6.1.5.2 Digital Zoom 22

6.1.5.3 Mode 22

6.1.5.4 LCD Brightness 23

6.1.5.5 Inactive Bluetooth menu option....23
6.1.5.6 Image Polarity....24
6.1.5.7 Mapping Control....24
6.1.5.8 Help and Quit Menu....24
6.1.5.9 Background....25
6.1.5.10 Analog Video....25
6.1.5.11 Language....26
6.1.5.12 Status Row....27
6.2 EyeCGas Operation....28
6.2.1 General....28
6.2.1.1 Power On & Off....28
6.2.1.2 Non-uniformity Correction (NUC) Operation....29
6.2.2 EyeCGas® Set-up for Operation....29
6.2.3 Snapshot /Video / Audio Recording....29
6.2.4 Operational Modes....29
6.2.5 Head Set mounting, connection and use....32
6.2.6 Side straps, shoulder (neck) strap and lens cover....32

7 EYECGAS® SOFTWARE "ARTSOFT"....33
7.1 Installation of the software....33
7.2 Connecting the EyeCGas® to the PC....33
7.3 ArtSoft Screens....34
7.3.1 Video Download screen....34
7.3.2 Setting date and time....37
7.3.3 Verifying System Version....37
7.3.4 Updating software and firmware....38

8 CONNECTIVITY TO OTHER DEVICES....39

9 TROUBLESHOOTING / MAINTENANCE....40

10 OPGAL....41

11 TECHNICAL SUPPORT / SERVICE....42

12 WARRANTY....43

APPENDIX A - ARTSOFT INSTALLATION....44

APPENDIX B –SPECIFICATION....62

APPENDIX C – PROCEDURE FOR CHANGING BATTERY IN FIELD....63

APPENDIX D – PROCEDURE FOR CHANGING LENS IN FIELD....64

APPENDIX E - CERTIFICATIONS....65

Table of Figures

Figure 1: EyeCGas® Case with contents 10
Figure 2: EyeCGas® Camera 11
Figure 3: EyeCGas Case 11
Figure 4: EyeCGas® Battery Pack 12
Figure 5: EyeCGas® Charger 12
Figure 6: EyeCGas® Glare Shield 12
Figure 7: EyeCGas® Shoulder Strap 13
Figure 8: EyeCGas® USB Cable set 13
Figure 9: EyeCGas® Head Set 13
Figure 10: Lens Cleaning Kit 13
Figure 11: AC Adapter 14
Figure 12: EyeCGas® 75mm Lens 14
Figure 13: EyeCGas® Battery P.S Kit 14
Figure 14: EyeCGas® BNC Video Adaptor 14
Figure 15: Front Panel 17
Figure 16: EyeCGas® Main Parts 18
Figure 17: Keypad Buttons Functionality in Normal Mode 18
Figure 18: Keypad Configuration in Enhanced Mode Operation 19
Figure 19: Keypad Mapping on LCD 20
Figure 20: Menu Display on LCD – Mapping Control ON 20
Figure 21: File manager screen 21
Figure 22: File selection screen for preview and deletion movies and pictures 21
Figure 23: Digital Zoom Screen Selection 22
Figure 24: Mode Selection 22
Figure 25: LCD Brightness to 100% 23
Figure 26: Bluetooth Set to Off 23
Figure 27: Polarity Selection Screen 24
Figure 28: Mapping Control On 24
Figure 29: Background Temperature Selection Screen 25
Figure 30: Analog Video Selection Screen 25
Figure 31: Language Selection Screen (for reference only) 26
Figure 32: Status Row 27
Figure 33: Keypad, Multifunction Middle Button 28
Figure 34: LED blinking During Cool Down 28
Figure 35: Mode Screen 29
Figure 36: Keypad Configuration in Enhanced Mode Operation 30
Figure 37: Enhanced Mode of Operation 30
Figure 38: Head set mounting to the hard hat 32
Figure 39: Choosing Artsoft Language screen 33
Figure 40: Welcome screen and communication search 33
Figure 41: Artsoft Icons 34
Figure 43: Movies download screen 35
Figure 44: Download progress window 35
Figure 45: File Manager Screen with preview 36
Figure 46: Movie commands 36
Figure 47: Convert to WMV confirmation 36

Figure 48: File conversion progress 36
Figure 49: Conversion finished message 36
Figure 50: Date and Time setting screen 37
Figure 51: System version screen 37
Figure 52: Camera Software and Firmware update screen 38

Packing List

A complete EyeCGas® system consists of the items in the table below. Items 1, 3 through 10 are housed in a rugged Carrying Case and all 10 items are standard with the system. You may have purchased additional accessories with your camera. These are listed in the "Accessories" column below.

No	Deliverables	Standard Item	Part Number	Accessories
1	EyeCGas® Camera	ü	8G9A0000A	
2	EyeCGas® Carrying Case	ü	815034	
3	EyeCGas® CD software	ü		
4	Batteries (x 3)	ü	8G9M5000B	
5	Battery Charger	ü	8G9M6000B	
6	Glare Shield	ü	8G9A0020C	
7	Shoulder Strap	ü	8G9A0029A	
8	Cable, USB A to Mini B	ü	1001249A	
9	USB Boost 5m	ü	1001248A	
10	EyeCGas® User's Manual	ü	PS8G9006-	
11	Head Set	ü	8G9A0050A	
12	Lens Cleaning Kit	ü	0618030019	
13	AC Adapter	ü	1000514A	
	75mm f/1.2 Manual Atherm. Lens Assy		8G9T7500A	ü
	Battery Power Supply Kit		8G9K0500A	ü
	BNC Video Adaptor		8G9H0010A	ü

Table 1: Packaging List

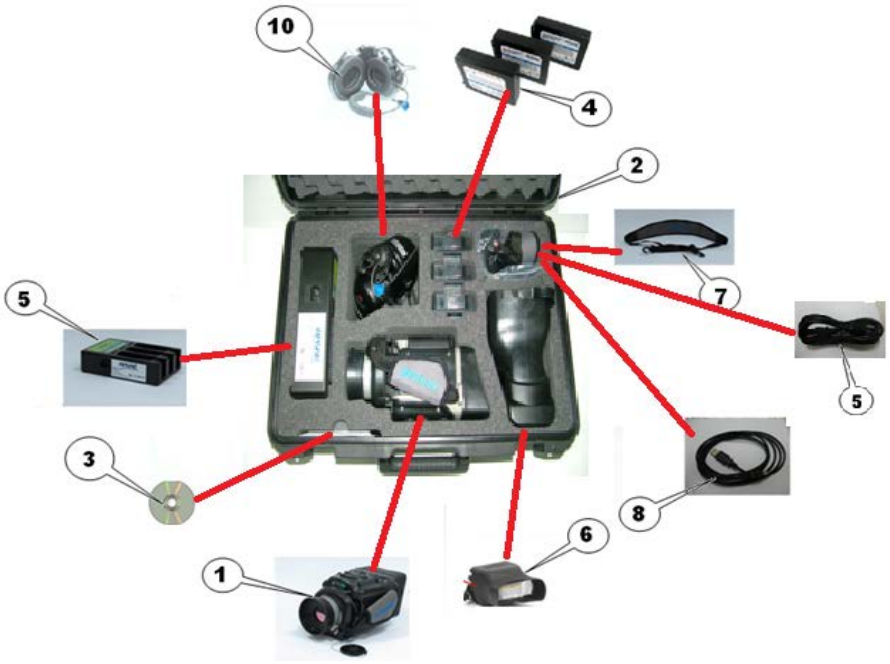

Figure 1: EyeCGas® Case with contents

System Overview

The following section highlights the key parts of the EyeCGas® System including accessories.

EyeCGas® Camera- P/N ***8G9A0000A***

EyeCGas® is a handheld infrared camera capable of autonomous imaging and recording operations for the detection of gas leaks. EyeCGas® runs on lithium ion polymer (Li-Ion) batteries.

Figure 2: EyeCGas® Camera

EyeCGas® Carrying Case

The EyeCGas® Carrying Case is a plastic hard case containing custom made protective foam designed to securely house and cushion the EyeCGas® camera. The case also conveniently stores the neck strap, charger, battery set, power cord, glare shield, USB cable, software CD and head set.

Figure 3: EyeCGas Case

ArtSoft CD Software for EyeCGas®

ArtSoft is a virtual "control panel" for EyeCGas®. Contained on a CD, ArtSoft facilitates various system operations for EyeCGas® including time and date setting, system version verification, software and firmware updating, file download, conversion and playback.

Batteries X 3

Set of three lithium ion battery packs for powering the EyeCGas®. One battery pack runs the EyeCGas® camera continuously for over four hours and is custom designed with voltage and protection circuitry exclusively for use with EyeCGas® camera.

Figure 4: EyeCGas® Battery Pack

Battery Charger

The 110/220 volt AC Battery Charger can charge 1-3 EyeCGas® battery packs simultaneously.

Figure 5: EyeCGas® Charger

Glare Shield

The EyeCGas® Glare Shield is useful for direct sunlight and other bright light situations where screen glare impedes direct viewing of the liquid crystal display (LCD). The glare shield is easily applied to the back of the camera around the LCD, blocking outside light. An optical magnifier promotes easier viewing.

Figure 6: EyeCGas® Glare Shield

Shoulder Strap

The Shoulder Strap provides hands-free transport for user and camera safety.

Figure 7: EyeCGas® Shoulder Strap

USB Boost cable and USB A to Mini USB B Cable

The USB cable set connects the EyeCGas® to a PC via a USB port. The EyeCGas® is equipped with a mini-B connector on the front panel for quick connection. The USB cable set comprises one 5m USB extension cable and one 30 cm mini USB to USB cable.

Figure 8: EyeCGas® USB Cable set

Head Set

The EyeCGas® Head Set enables audio overlays onto recorded video. The operator can embed an audio track during video recording, while the headset speakers output the recorded soundtrack during playback for field audio and video monitoring. The head set attaches to the user's hard hat.

Figure 9: EyeCGas® Head Set

Lens Cleaning Kit

This is a sophisticated in one brush and lens clean tip.

Figure 10: Lens Cleaning Kit

AC Adapter

The AC Adapter allows the connection to different country sockets

Figure 11: AC Adapter

Optional Accessories

These optional accessories, available for EyeCGas®, promote optimal ease-of-use and enhanced user experience (not supplied standard with EyeCGas®):

1.1.2 75mm f/1.2 Manual Athermal. Lens Assy.

The &5 mm Lens telescope for EyeCGas® allows the detection of the gases at longer distances with a field of view of 7.°.

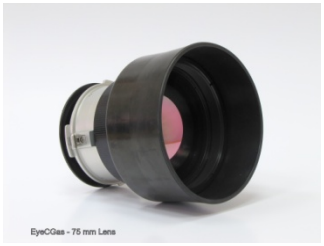

Figure 12: EyeCGas® 75mm Lens

1.1.3 BATTERY POWER SUPPLY KIT

The specially equipped Tripod/Monopod connects EyeCGas® for stationary, long-term viewing and recording.

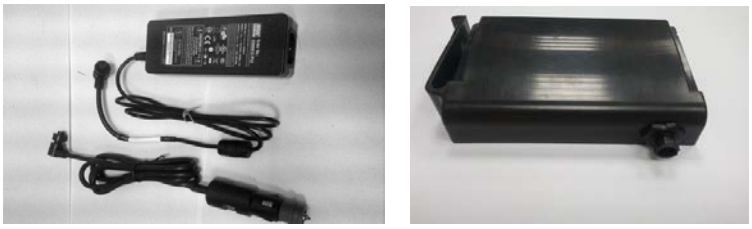

Figure 13: EyeCGas® Battery P.S Kit

1.1.4 BNC Video Adapter

The BNC Video Adapter allows the real-time infrared video image to be displayed on an external device such as a projector or monitor.

Figure 14: EyeCGas® BNC Video Adaptor

Features

These features maximize the functionality and capability of the EyeCGas® Infrared Camera:

1.1.5 DVR - Digital Video Recorder

The Digital Video Recorder (DVR) for EyeCGas® records up to 16 gigabytes of audio and video. The DVR built into the EyeCGas® housing requires no additional hardware. Audio and video files are stored in its internal memory and are downloadable via USB to a PC. EyeCGas® can record and playback infrared video, visible video and audio files. Audio and video files can be deleted from the camera's memory as needed. The Artsoft program can be used to download files in *.MP4 format.

1.1.6 CCD –Video Camera

A Video Camera (CCD) adds CCD visible video capability to EyeCGas® enhancing operator orientation, component identification and text and number recognition.

Prior to Operation

Battery Charging

To charge EyeCGas® batteries, connect the AC power cord to the battery charger and plug the cord into an AC outlet. Insert a battery into the EyeCGas® charger by loading the battery into the charger until it latches (the battery can only be loaded one way). Repeat for the other two batteries. The battery charger LEDs will indicate red while charging and turn to green when the corresponding battery is fully charged. A flashing red LED indicates an error such as incorrect battery placement on the charger or an improperly functioning battery. To fully charge a depleted battery takes about 6 hours.

Caution

- Use only EyeCGas® battery packs manufactured by Opgal (part number: 8G9M5000B).
- Use only the supplied battery charger to charge the battery packs.
- Damage to the EyeCGas® system caused by batteries manufactured by other companies may void the system warranty.
- Do not charge the battery pack(s) while they are hot.
- Do not charge the battery pack(s) or operate the battery charger in a hazardous environment.
- Recycle the battery pack(s) at an approved disposal location.
- Operating the battery pack(s) in high or low temperature environments will reduce operational run time.
- Do not expose the battery pack(s) to fire or extremely high temperatures.
- Do not cause damage to or attempt to short circuit the battery pack(s).
- Fully charge a battery pack if it has not been used in two months.
- Refer to Section 8, Troubleshooting and Maintenance for additional battery pack maintenance recommendations.

EyeCGas® Initial Operation

Before operating your EyeCGas® camera for the first time, ensure that all standard items and features and those accessories or features that you have purchased are included and/or installed per the Packing List.

- Take out the EyeCGas® camera and remove the installed battery.
- Take out the two additional battery packs from the carrying case.
- Remove the adhesive tape from all battery contacts if installed.
- Place the battery packs in the charger and perform a full charge.
- Check if the battery packs have a full charge by verifying the green LED is lit on the charger for all three packs. When installed on the EyeCGas®, all three green LEDs will be lit to also indicate the battery pack is fully charged. OPGAL recommends that you fully charge any battery pack which is not fully charged prior to using.
- Install a fully charged battery pack into the EyeCGas® camera.

EyeCGas® Controls and Operation

The following section details operation and use of the EyeCGas® Infrared Camera.

Controls and Display

Using the EyeCGas® is simple and intuitive. Large, convenient buttons located on the top of the EyeCGas® control most camera operations. The two connectors located on the front panel facilitate connection to external devices.

1.1.7 Front Panel

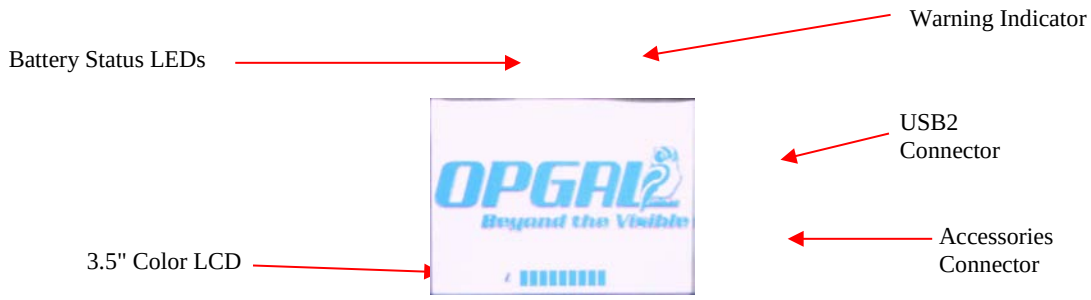

Figure 15: Front Panel

The front panel of the EyeCGas® comprises the following:

1.1.7.1 3.5" Color LCD Display

A VGA format 640 x 480 LCD displays high resolution grayscale infrared and visible color video images. The glare resistant LCD is designed to be viewable in brightly lit areas.

1.1.7.2 Battery Status LEDs

Five LEDs, from left to right, display EyeCGas® battery status. The three green, one yellow and one red LEDs provide easy recognition of remaining battery capacity. The LEDs will extinguish in order from left green to right red. A single red LED indicates the battery is very low and should be changed out with a fully charged one.

1.1.7.3 Camera Warning Indicator

A red LED on the right side of the row of LEDs indicates when the EyeCGas® or battery is not working properly.

1.1.7.4 USB2 Connector

The USB2 connector is useful at the conclusion of field operations, allowing a user to upload information to EyeCGas® as well as download audio and video files directly to a PC. This connector is protected by a cover which must be in place when the connector is not in use.

1.1.7.5 Accessories Connector

The accessories connector allows a user to connect the standard head set and optional analog video adaptor. This connector is protected by a cover which must be in place when the connector is not in use.

1.1.8 EyeCGas® Components

Designed to withstand the rigors of everyday handling in refineries and chemical plants, EyeCGas® also incorporates safeguards for use in hot air environments.
The key components of EyeCGas® are shown in Figure 16.

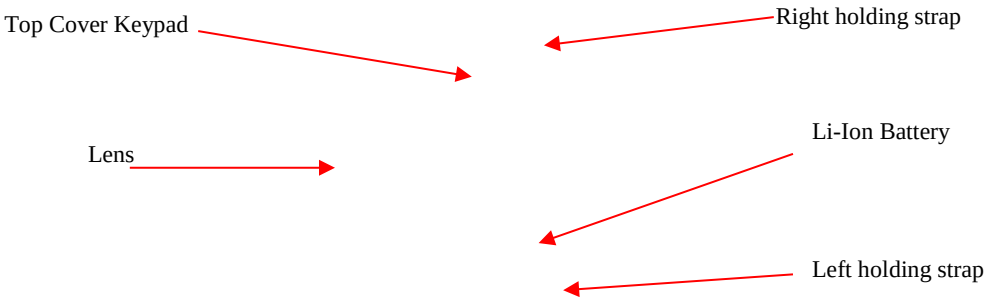

Figure 16: EyeCGas® Main Parts

1.1.9 Keypad Buttons and connectors

The default setup of the keypad buttons is shown in Figure 17.

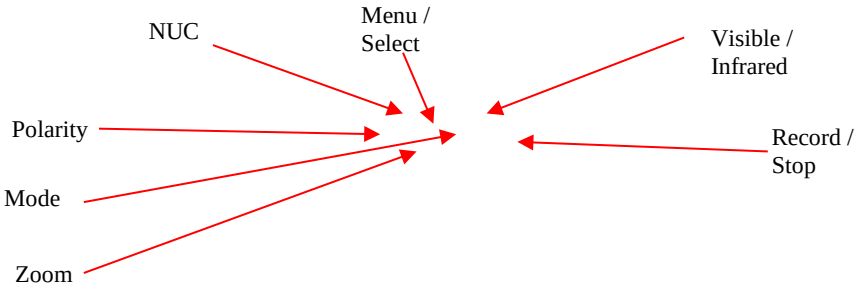

Figure 17: Keypad Buttons Functionality in Normal Mode

1.1.9.1 NUC

The NUC, or Non-uniformity Correction, button refreshes the camera image as needed. Refer to section 6.2.1.2 for details. Also is used as the down arrow when in menu mode

1.1.9.2 Polarity

The Polarity button switches the infrared image between white hot (WH) and black hot (BH) depending on user preference and scene dynamics.

1.1.9.3 Visible / Infrared

The Visible / Infrared button switches between the CCD visible image and the infrared image. EyeCGas® can record both types of imagery with the DVR.

1.1.9.4 Menu /Select

The Menu button is the main interface of EyeCGas®. Depressing the menu button shows various options and commands while depressing the menu button a second time while a corresponding item is selected initiates those options and commands. Refer to section 6.1.4 for details.

1.1.9.5 Mode

The Mode button switches between Normal and Enhanced modes.

While in Normal mode the camera is set for handheld monitoring of the components in the search for potential leaks.

The second Mode is called Enhanced (ENH). In this mode the camera performs in a high sensitivity detection mode and the use of a tripod or monopod is recommended to visualize the leaks of a cluster of components and at a distance.

To enter the ENH mode (see Figure 17), press the Mode button while in Normal mode. After the button is pressed the keypad configuration will change to that described below in Figure 18.

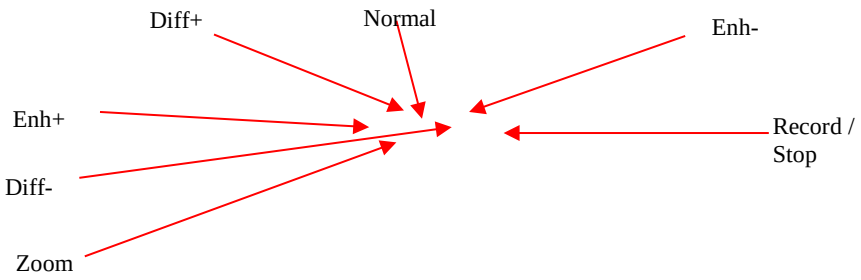

Figure 18: Keypad Configuration in Enhanced Mode Operation

1.1.9.6 Record / Stop

The Record / Stop button facilitates recording of either visible or infrared video and audio to the DVR. Depress the Record button once to begin recording and a second time to stop recording.

1.1.9.7 Zoom

The Zoom button scrolls through the electronic zooms. When the button is repeatedly pressed the zoom increases from x1 to x2 to x4 and back again to x1.

Note: Most of the button functions are also available through the menu.

1.1.10 Menu and Keypad Map

The Keypad map can appear on the screen to guide new users working the EyeCGas®, as shown in Figure 19.

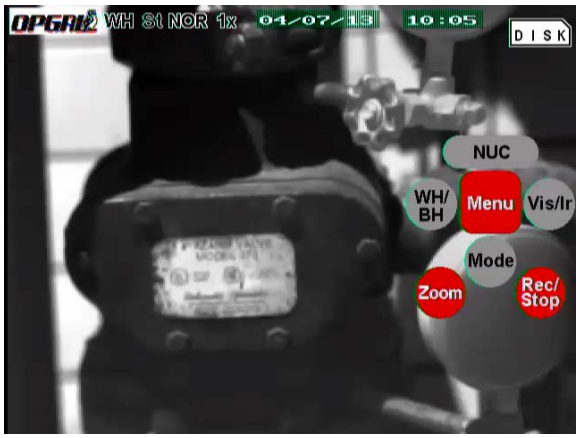

Figure 19: Keypad Mapping on LCD

The EyeCGas® menu system allows advanced users to set up the camera configuration, as shown in Figure 20, according to their individualized needs.

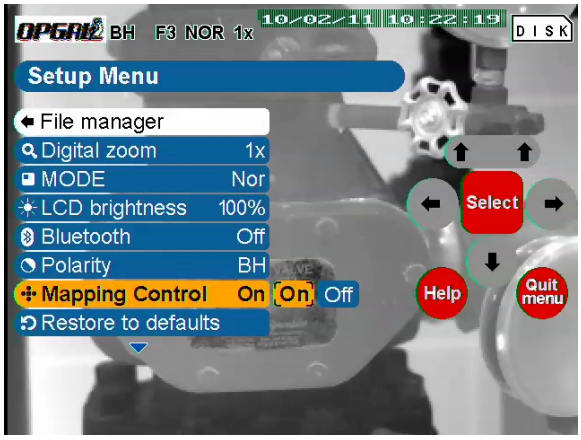

Figure 20: Menu Display on LCD – Mapping Control ON

1.1.11 Setup Menu

By pressing the Menu button in Normal Mode, the Setup Menu will be displayed on the LCD. Pressing the up, down, left or right buttons will allow the navigation through the menu options. An orange highlighted color over the selection will show the actual selectable , when an option is selected the optional values for selection will appear on the right of the function name , moving right or left with the right and left arrows will, after pressing select, change the function to the selected value, which is then marked on its four corners

1.1.11.1 File Manager

Selecting File Manager allows users to preview and delete files stored in the DVR.

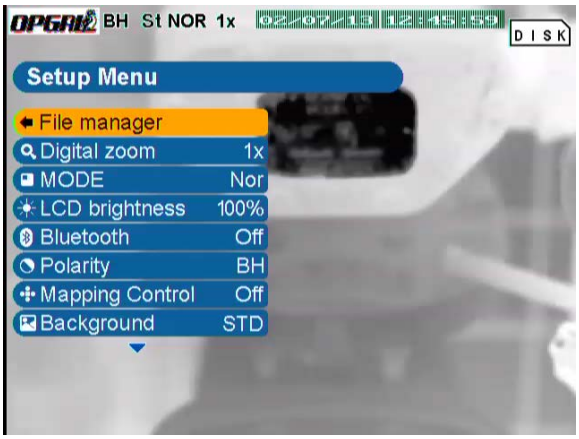

Figure 21: File manager screen

Upon selecting File Manager, a list of infrared and visible image and movie files will appear. Selecting a file for preview will display it on the LCD. Selecting "*X* "(when its background is yellow) next to the file name and then pressing the "Select" button will delete the file from the DVR permanently. As shown in Figure 22, play is selected.

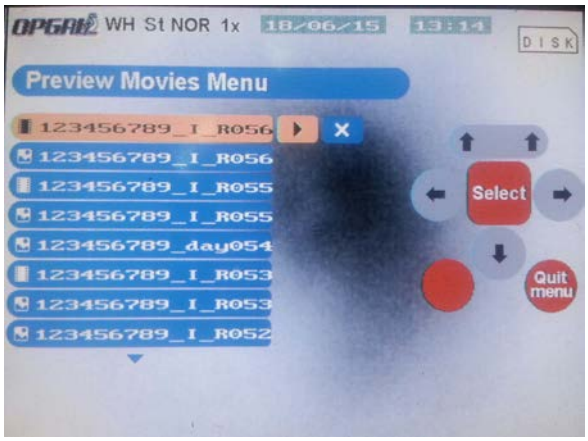

Figure 22: File selection screen for preview and deletion movies and pictures

1.1.11.2 Digital Zoom

Digital Zoom allows the user to electronically zoom EyeCGas® while viewing infrared imagery. Selectable options are 1x or no zoom (default), 2x zoom and 4x zoom.

Figure 23: Digital Zoom Screen Selection

1.1.11.3 Mode

Users can select between two modes of operation. Normal mode (*Nor*) is the default setting and appropriate for most applications. Enhanced mode (*Enh*) can be used in environments where scene dynamics make gas detection more difficult, allowing high sensitivity when using the EyeCGas® on a steady pose with a tripod or monopod.

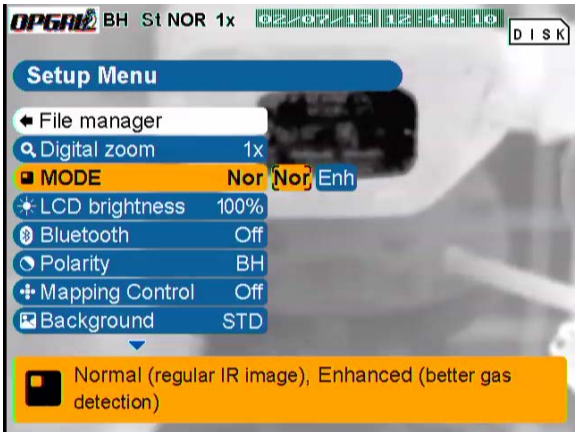

Figure 24: Mode Selection

1.1.11.4 LCD Brightness

Users can adjust LCD brightness on EyeCGas®. Adjustable settings are 25%, 50%, 75% and 100% brightness levels. Less brightness conserves battery power.

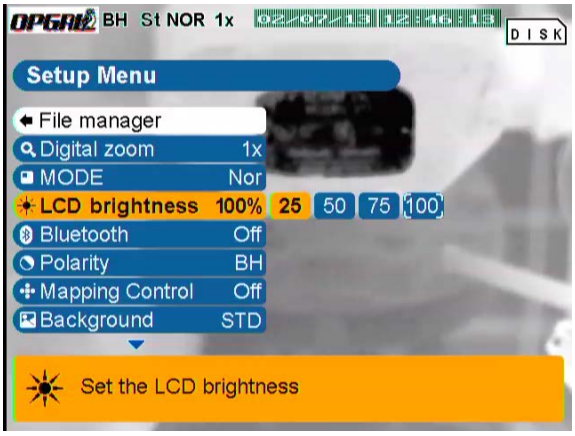

Figure 25: LCD Brightness to 100%

1.1.11.5 Inactive Bluetooth menu option

Users should not try to activate Bluetooth functionality. Keep this setting set to *Off* to conserve power.

Figure 26: Bluetooth Set to Off

1.1.11.6 Image Polarity

Users can select image polarity for infrared imagery. Selectable options are the default **White Hot** (*WH*) and **Black Hot** (*BH*).

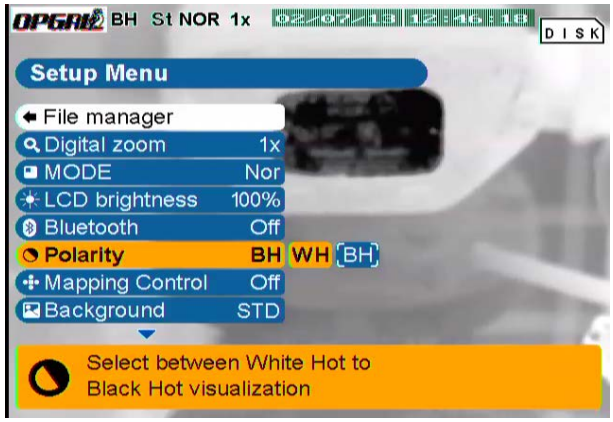

Figure 27: Polarity Selection Screen

1.1.11.7 Mapping Control

Users can select the keypad Mapping Control *On* or *Off*

Figure 28: Mapping Control On

1.1.11.8 Help and Quit Menu

Help text will appear at the lower part of the screen upon selection of the help command button while navigating menu items (see Figure 14). Selecting help again will remove the help text. To exit the menu system, select *Quit Menu*.

1.1.11.9 Background

Users can select between *St (*Standard) or *vHot (*very hot) temperature backgrounds. The *St* background is the default background selected by the camera and whenever a very hot temperature background is present, the user may change to *vHot* to allow better image of the gas and the background without saturation.

Figure 29: Background Temperature Selection Screen

1.1.11.10 Analog Video

Users can turn analog video On or Off (infrared video output using the optional BNC Video Adapter, keeping it set to Off conserves power).

Figure 30: Analog Video Selection Screen

1.1.11.11 Language

User can select different present languages by scrolling right or left and then select, after select the camera language will change to the selected one.

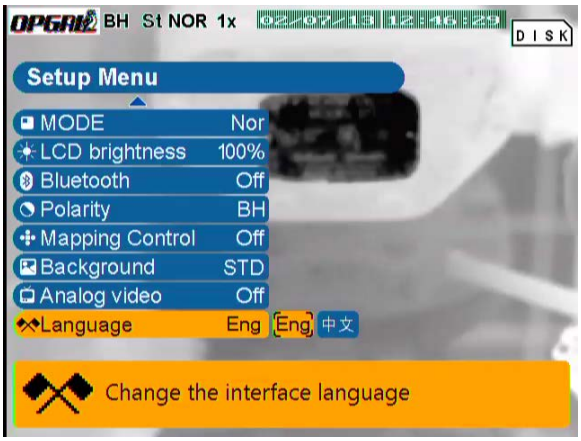

Figure 31: Language Selection Screen (for reference only)

1.1.11.12 Status Row

The status row shows all the current operating modes and date and time of EyeCGas®. Specific indicators are described below.

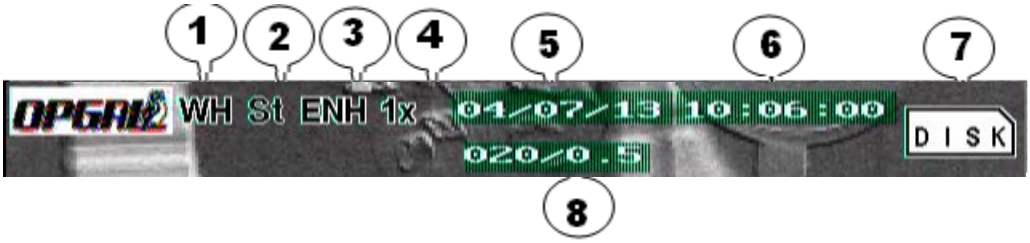

Figure 32: Status Row

1. Image Polarity – designated by either *WH* or *BH* refers to whether the infrared image is set to white hot or black hot. The infrared image is displayed in shades of grey. In *WH* mode, the hottest parts of the image are displayed in white while the coolest parts in black; in *BH* mode the hottest parts of the image are displayed as black while the coolest parts are white.
2. Background Selection. St is for standard background temperature and vHot is for very hot background temperature. Default is St.
3. Mode – designated as *NOR* or *ENH*, indicates the operating mode of the camera. Refer to Sections 6.1.3.5, 6.1.5.3 and 6.2.4 for details on using the modes.
4. Zoom value – designated as *1x*, *2x*, or *4x* indicates the electronic zoom value.
5. Date – displayed as MM/DD/YY indicates the current date.
6. Time – displayed using the 24-hour timekeeping system (seconds are displayed while recording) indicates the current time. The time is factory set to UTC time. The user can change the camera's time using Artsoft. See 7.2.2 for details.
7. Recording Capacity – designated by the *DISK* symbol indicates the remaining recording capacity of EyeCGas®. Initially all white, as the camera records images and video the indicator begins to fill green in 25% capacity steps. A fully green indicator (4 green bars) means EyeCGas® has no recording space available.
8. When in Enhanced Mode the actual parameter numbers of enhanced adjustment will be displayed. The number on the left corresponds to the depth of enhancement (from 005 to 100, see Table 1) and the number on the right is the amount of background scene adjustment (from 0.20 to 0.80, see Table 2).

EyeCGas Operation

1.1.12 General

1.1.12.1 Power On & Off

Before powering on the camera, ensure that the battery is properly inserted and fully charged.

EyeCGas® Power Button: ***(see Figure 33)***

To power on the EyeCGas® camera, depress the middle Power/Menu Button for one second. A sequence of screens will appear as the camera initiates an internal calibration sequence.

Figure 33: Keypad, Multifunction Middle Button

During the initial 30 second (approximate) power up sequence, EyeCGas® will display a white screen followed by a color test screen. After this is completed, the Opgal logo will appear and will fade to black (the battery LEDs will also fade) during the next 30 seconds to conserve battery life while the internal cooler lowers to its required operating temperature. After the LCD dims to black, the left most LED battery indicator will blink indicating that the detector cooler is cooling to its required temperature.

Figure 34: LED blinking During Cool Down

The cool down sequence will take approximately 8 to 10 minutes. After cool down is done the camera will perform an automatic NUC. When completed, a video image will appear on the LCD.
To power off the EyeCGas®, depress the Power/Menu Button for a minimum of 8 seconds.

*Note: While in Power ON sequence, the lens cap **MUST** be mounted on the lens*

1.1.12.2 Non-uniformity Correction (NUC) Operation

The NUC calibrates the EyeCGas® image making it ready for use. To perform a NUC, cover the lens with the lens cap and press the large NUC button (Figure 3). The image will freeze (indicated by no movement in background noise). Upon completion of the image freeze, a uniform image will be displayed on the LCD, and the EyeCGas® will be ready for use.

1.1.13 *EyeCGas®* Set-up for Operation

1. Ensure that the EyeCGas® camera is powered on and ready for use.
2. Perform a NUC (see section 6.2.1.2 for details).
3. Select the mode of operation via the Menu.
4. Select other desired parameters and exit the menu by depressing the Quit Menu button.
5. Aim EyeCGas® toward a desired component or area for inspection and manually focus the lens via the rubber ring until the image is clear.
6. The image can be adjusted as necessary to correspond to changing scene conditions. When detection proves difficult, adjust the camera's polarity and mode (Normal or Enhanced) to enable better detection capability.

1.1.14 Snapshot /Video / Audio Recording

1. To record video and snapshot, depress the "Record" button once to begin and a second time to stop. The camera will make a snapshot of the current video (IR or VIS) first and then begin recording.
2. While recording users can change polarity, switch between infrared and visible CCD video, change modes and other settings. Connect the head set to the accessories connector to also record audio.
3. A red blinking indicator will be active when recording under the DISK icon.
4. To play back records, depress the Menu button and enter the File Manager menu. Browse the files, select the desired file (for snapshot or for video) and depress menu again to view the file. A video file can also be deleted when selected.

   Note: you cannot recover deleted files.
   Note: Max recordable file size is 3.55G
   Note: Files bigger the 200M can't be playback locally and need to be downloaded.

1.1.15 Operational Modes

The EyeCGas® camera has two basic operational modes: Normal and Enhanced, which are selectable by depressing the Mode button on the keypad.

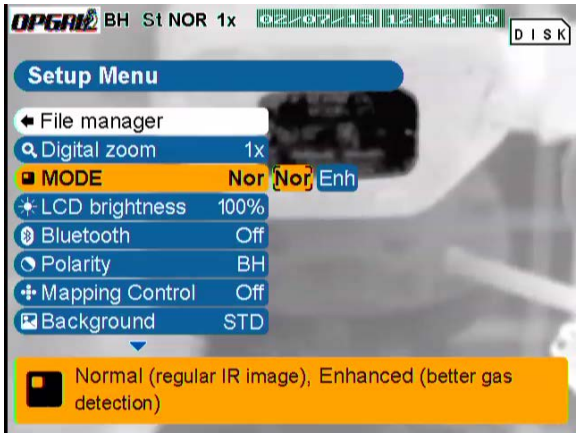

Figure 35: Mode Screen

1. Normal Mode (*Nor*). This mode provides standard detection functionality for normal environmental conditions being the common mode for operating the EyeCGas®.

2. Enhanced Mode (*Enh*). This mode provides enhanced sensitivity while operating in low-contrast backgrounds and/or where attempting to detect low gas flow leakages; EyeCGas® will provide greater sensitivity but the image will appear grainier while operating in enhanced mode.

    - From the Normal mode when the Mode button is pressed the keypad configuration will change to provide adjustments in the Enhanced Mode as shown in Figure 36. The adjustment is required for maximum detection while having a clear and steady image. The default values provide full detection capabilities, but in order to bring the camera to a clear and steady image without losing the gas leak detection change to lower values Enh+/Enh- first and then Diff+/Diff- as shown in Table 2 on page 31.

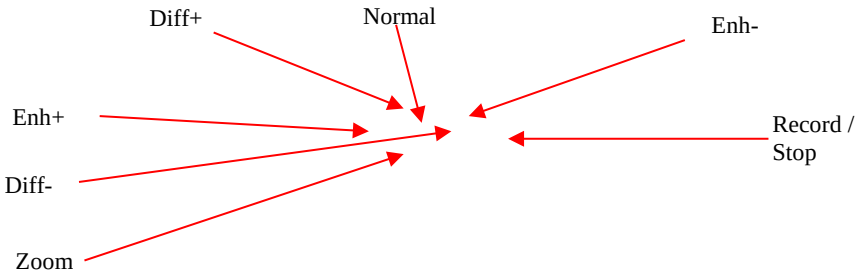

Figure 36: Keypad Configuration in Enhanced Mode Operation

Figure 37: Enhanced Mode of Operation

- Up/Down (Diff+/Diff-) buttons adjust the depth of the enhanced function. The maximum enhanced level is 005 as indicated in the Status row. See Figures 32, 37 and Table 2 for settings and values.

Diff+/ Diff-		Enh+/Enh-	
maximum	005	20% Background	0.2
	007		
	010	40% Background	0.4
	020		
	030	50% Background	0.5
	040		
	050	60% Background	0.6
	060		
	070	80% Background	0.8
	080		
	090		
minimum	100		

Table 2: Enhanced values adjustment

- Right /Left (Enh+/Enh-) buttons adjust the amount of background scene as a ratio used for the final image displayed. The maximum enhanced value is 0.2. See Figures 32, 37 and Table 2 for settings and values.

2.1 Enhanced Mode (Enh) operational explanation.

The principle of use of the enhanced mode is related to the values of Diff and Enh commands. The higher the values are the more the image will appear clear and noiseless. For higher contrasting backgrounds, the higher the Enh value is the better the acquired image and detection will be. For the purpose of enhancing poor contrasts the value of Enh should be set to lower ones while keeping in mind that when the gas is visualized on the LCD the image should be as less grainy as possible by when adjusted with the (+) or (-) Enh command.

The same holds for the Diff value, which in this case the highest value is used for detecting large leaks. For small leaks the Diff value should be adjusted lower until the leak is seen.

A combination of the two values will allow the user to achieve the best image quality for finding leaks and performing best for video recording when desired.

1.1.16 Head Set mounting, connection and use

Connect the Head Set to EyeCGas® through the Accessories connector located to the right of the display below the USB2 connector (see Figure 1). Mount the head set on your hard hat as shown in Figure 38.

Figure 38: Head set mounting to the hard hat

For recording audio, speak into the noise cancelling microphone during recording. Audio recording will automatically be recorded with the video track. The head set performs audio recording and play back. The head set earphones can be used to listen to embedded recorded audio from an EyeCGas® file and also provides basic hearing protection.

1.1.17 Side straps, shoulder (neck) strap and lens cover

The side straps and neck strap are adjustable to adapt to each user. To adjust the side straps, lift up the flap, adjust the strap length and push the flap back down again.

It is highly recommended to attach and use the neck strap for hands-free camera transport as well as user and camera safety.

The lens cover may be attached to one of the side straps when the camera is in use to prevent the lens cable from being snagged. When the camera is not in use the lens cover must be attached over the lens to protect the lens.

EyeCGas® Software "ARTSOFT"

ArtSoft is a virtual “control panel” for the EyeCGas® infrared camera. Contained on a CD, ArtSoft facilitates various system operations for the EyeCGas® including time and date setting, system version verification, software and firmware updating and file management, conversion and playback. ArtSoft is a Windows XP, Vista and 7 compatible programs.

Installation of the software

Insert the CD into the PC.
Run the Artsoft application file (as supplied in the installation CD).
Follow the installation instructions located in Appendix A.

Note: If the software Direct X, Dot Net Framework and K-lite are already installed in your computer there is no need to install them again. (Press cancel)

Connecting the EyeCGas® to the PC

Run the Artsoft software on the PC.
A prompt message will appear for you to choose the available language of the Artsoft suitable to your needs.

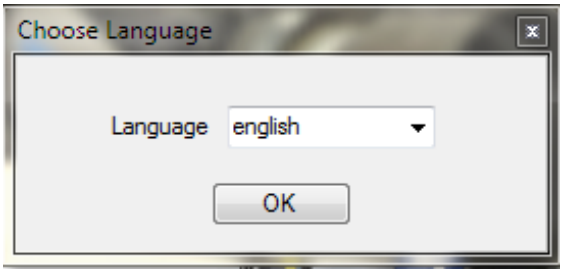

Figure 39: Choosing Artsoft Language screen

Connect the camera to the PC through the mini USB to USB cable set (supplied) to the USB connection connector in the front panel of the EyeCGas® (Figure 15) and the PC USB connector. Wait until the connection is recognized and proceed to download movies or perform other functions.

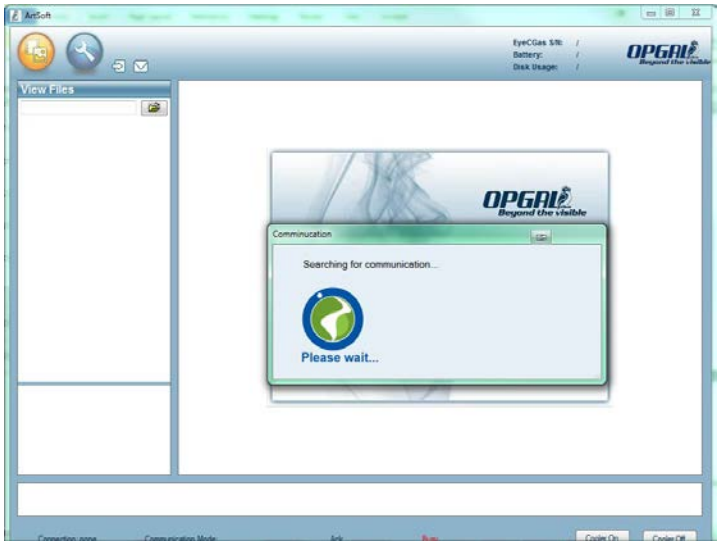

Figure 40: Welcome screen and communication search

ArtSoft Screens

There are two major windows in ArtSoft and the four icons for those windows are shown in Figure 41 below.

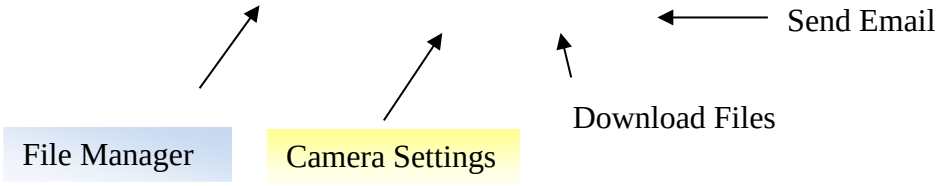

Figure 41: Artsoft Icons

Clicking the File Manager icon will allow opening the proper window to manage movie files. The Download Files icon is for manual operations and not typically used. The Camera Settings window will allow the user to adjust the date and time in the camera as well as update new software and firmware versions upon availability. The Send Email icon will allow an email to be sent to Opgal's service center or representative for any questions or failure report. An internet connection is needed.

1.1.18 Video Download screen

The EyeCGas® camera contains a SD memory card which stores all the recorded movies. After a communication is achieved with the camera, a popup screen appears and asks whether to move the stored files from the camera to the PC. Answering "Yes" allows the files to be moved from the camera and copied to the PC.

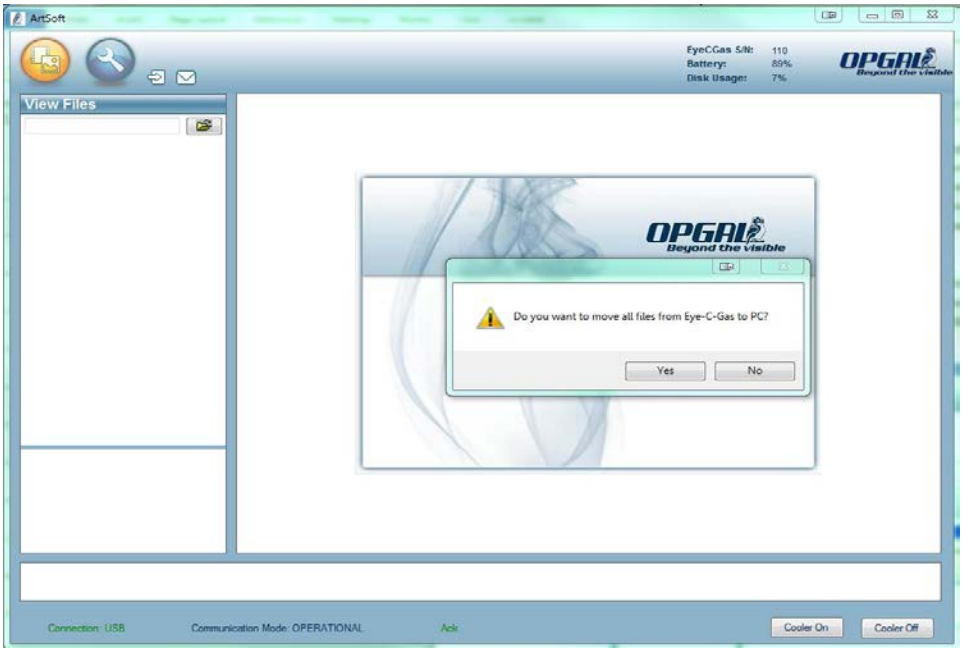

Note: There is an option to deactivate the cooler for noise reduction, cooler and battery life saving noise selecting the Cooler Off button. The cooler can be activated again using the Cooler ON button

Answering Yes will start the download process and will display the following screen until the download is complete, showing the progress made. Before the download will be performed an additional question will be asked, "Do you want to delete the files from the camera at the end?" If answered “Yes”, all the files will be removed from the camera. It is recommended to answer “No” until downloaded.

The movies will be located at the default folder: C: \Artsoft\EyeCGas_Movies unless changed to a different location

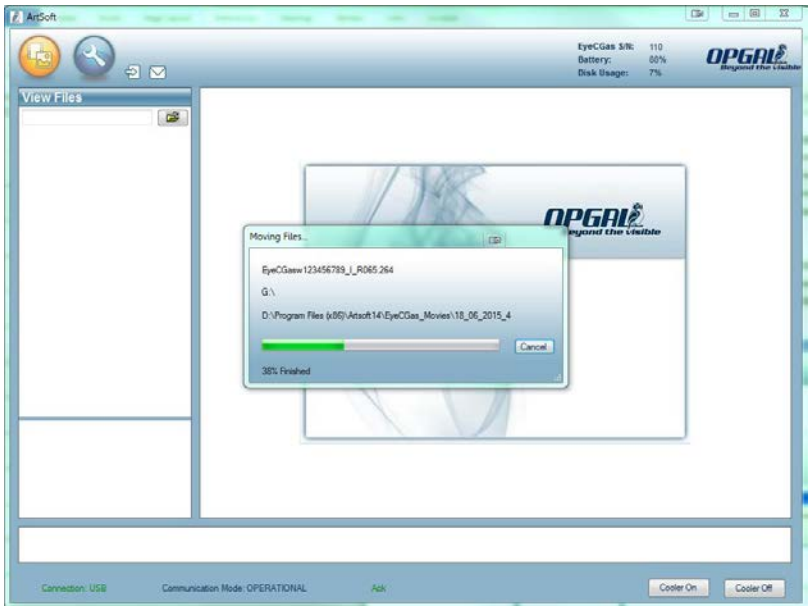

Figure 42: Movies download screen

While in the download process a small window will show the progress as shown in Figure 44.

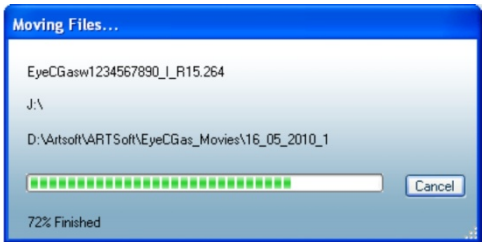

Figure 43: Download progress window

When the download is completed, the left window will show the downloaded movie names and it will be possible to select which movie to be played or deleted from the PC as shown in Figure 45. The movies will be in the MP4 file format.

Figure 44: File Manager Screen with preview

Once the download is completed, it can be viewed in the right side of the screen when selected. The Movie or picture can be played by selecting play, stop or pause respectively. The movie can be also deleted from the folder by clicking the "Delete" command. An additional button provides the command to convert the movie to a WMV format if desired.

Figure 45: Movie commands

Clicking the "Convert to WMV" button will display the following message:

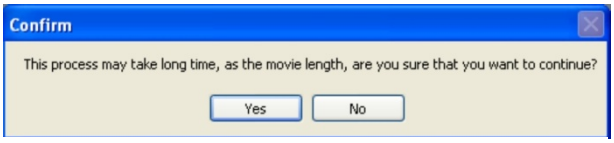

Figure 46: Convert to WMV confirmation

And when Yes is clicked the process will start and show the conversion progress as displayed in the figure below:



Figure 47: File conversion progress

Once the process is finished the following message will be displayed:

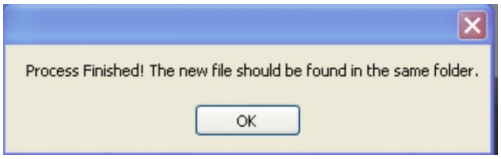

Figure 48: Conversion finished message

1.1.19 Setting date and time

Through this screen the date and time setting to the camera may be done as well as the date format. Setting the time takes about 1 minute to complete.

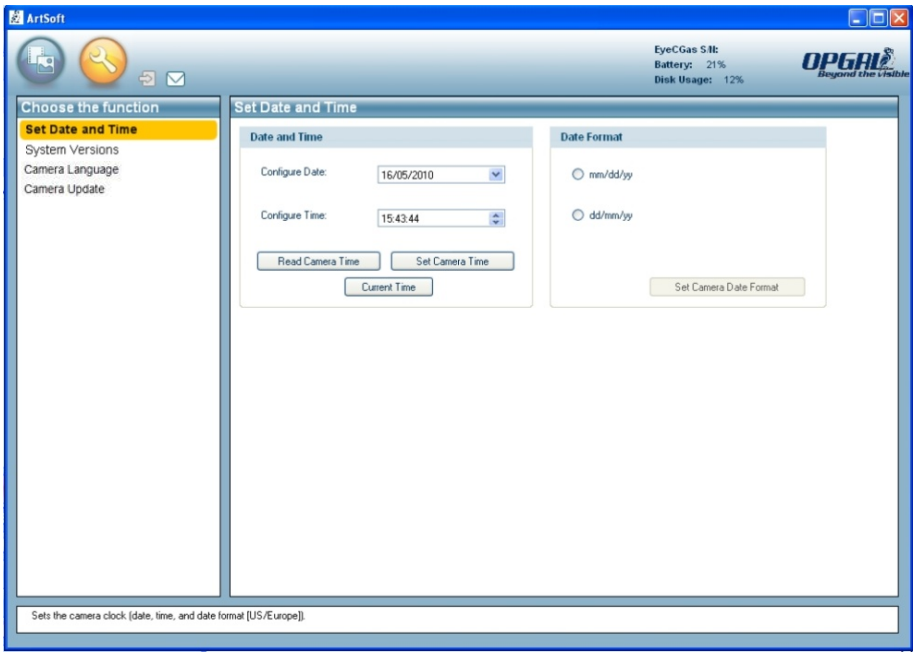

Figure 49: Date and Time setting screen

1.1.20 Verifying System Version

This screen allows the user to view the system version of the camera and Artsoft.

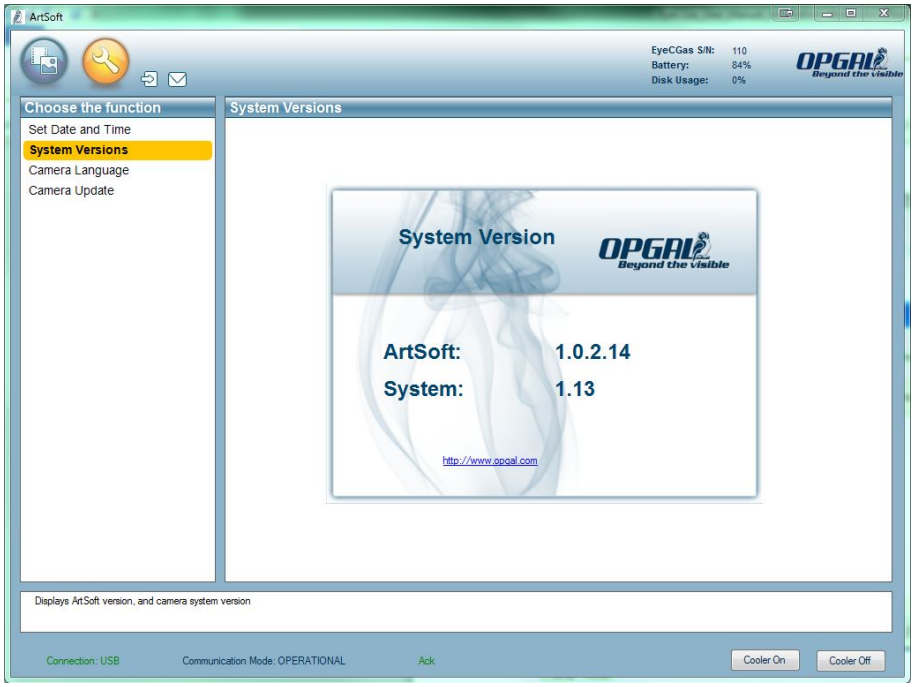

Figure 50: System version screen

1.1.21 Updating software and firmware

Through this screen Artsoft allows the user to update the software and firmware of the EyeCGas® camera. When an update is available, the upload process is performed automatically after selecting the folder where the file is located and clicking “Load”.
When the load process is finished the EyeCGas® must turn off and on again to allow the update process in the camera to be completed.

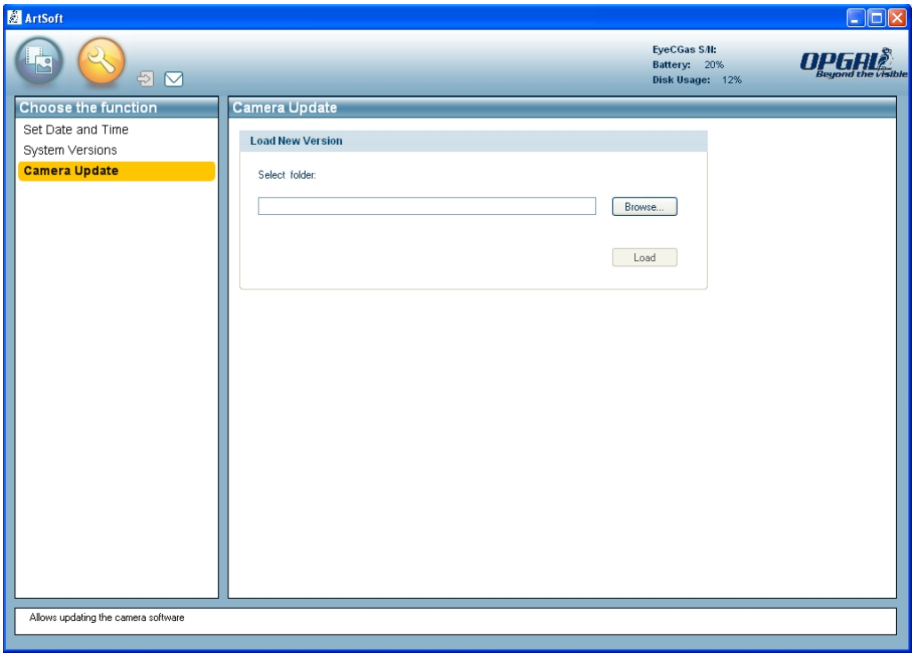

Figure 51: Camera Software and Firmware update screen

Connectivity to other Devices

The EyeCGas® camera, when connected to a PC using USB2, will appear to the PC as a removable flash drive. Experienced PC users will be able to explore the contents of the SD memory card which will contain the original uncompressed 264 video files, the WAV audio files and camera files. In the event Artsoft is not available and free space must be made available on the SD memory card, the 264, WAV and camera files can be downloaded to a PC and then deleted from the camera. A third party conversion program will then be required to merge and convert the original files to MP4 and / or WMV. The original files can also be uploaded back into the SD memory card at a later date and Artsoft then used.

Note: Use the cables supplied with the camera in order to connect between the camera and the PC.

The accessories connector (see Figure 15) can also be used with the optional BNC Video Adapter for real-time viewing of the infrared image on an external device such as a projector or monitor. Playback is not supported in the analog video output. The analog infrared video output is in composite form. A BNC to RCA adapter can be used along with a cable with the video adapter for easy connection to the “yellow” RCA input on the external device. The analog video output must be enabled (set to ON) in the Menu. See Section 6.1.5.10 for details. When not needed, the analog video output should be disabled (set to OFF) to conserve power.

Troubleshooting / Maintenance

To prevent the lens from becoming scratched, always attach the lens cover when the camera is not being used. If the lens becomes dirty or smudged, do not try to wipe or rub the lens clean with any cloth other than one intended for optics use. If necessary, dampen the optical cloth or tissue with water and lightly wipe the lens. Allow to air dry before use or attaching the lens cover. The LCD protective screen may also be cleaned with a dampened optical cloth or tissue.

The camera body may be cleaned with a soft cotton cloth dampened with water. Do not use any solvents.

It is normal for the batteries to wear out with use and they will need to be replaced after several hundred charge cycles. The Li-ion battery packs require special care when not used for extended periods of time. It is recommended to not leave a battery pack in the charger during storage. When charged, the battery pack(s) should be removed from the charger and stored at ambient conditions between 50 – 80^{o}F and less than 70 % relative humidity as in a home or office. They should not be stored in a warehouse that is not climate controlled. It is also recommended that at least once every other month during storage the battery pack(s) be placed in the charger and topped off. The batteries should not be allowed to fully discharge and then be stored for extended periods of time. This will significantly shorten the charge cycle lifetime and capacity of the batteries. During normal use the battery pack(s) should also be charged at ambient conditions between 50 – 80^{o}F. Significantly higher or lower temperatures will not allow the battery pack(s) to be charged to full capacity and will also shorten their charge cycle lifetime.

Do not attempt to disassemble the camera. This will void the warranty.

In necessary, contact your local sales office or the factory at gas@opgal.com for service and support.

OPGAL

OPGAL Optronic Industries is a leading global manufacturer of innovative thermal imaging safety systems and infrared cameras. Its safety applications are used for detection of gas and hazardous material leaks and for aerial remote fire detection. OPGAL offers the widest selection of infrared cooled and un-cooled OEM cameras and engines for military, paramilitary, security and aviation applications. Its products have been field tested worldwide since 1983.
The company's creative R&D, cutting edge technology, speed and flexibility make us your best partner for IR applications.

OPGAL's diverse product line includes fully integrated thermal imaging systems customized to specific applications, as well as off the-shelf thermal imaging cameras and engines for private labeling, OEM partners and other systems integrators.

Key applications:

- Safety - fire detection, gas and hazardous material leak detection systems
- Cutting-edge infrared camera for the avionic industry
- Infrared defense OEM partnership
- Strategic site protection & security
- Law enforcement, rescue and fire fighting thermal

Technical Support / Service

NOTE:
Before contacting Opgal on a technical support or service matter, please consult the Troubleshooting section of this manual. Many common issues are listed in this section and you may find a quick answer or solution by checking this section before contacting Opgal.

Technical Support
For technical support inquiries, please follow the inquiry submission instructions on our technical support page at www.eyecgas.com/support. Our team will assess your question or issue and respond back to you within 24 business hours.

Service
If your EyeCGas® Infrared Camera is not performing properly, please contact Opgal at +972 49953961. Describe the problem to the Opgal representative as completely as possible. For your convenience, your representative may try to help you diagnose or correct the problem over the phone. Before returning your EyeCGas® Infrared Camera, you should verify with your representative that the product should be returned to Opgal. Opgal Customer Service will provide you with written permission and a return authorization number.

If the return is a non-warranty repair, an Opgal Customer Service Representative will provide you with a repair invoice estimate. To authorize repair, you must provide Opgal a purchase order for the amount of the estimate. Once Opgal receives your authorization, we will issue you a return authorization number so that you can return the unit for service. If the cost of repairs exceeds the stated quote by more than 15%, an Opgal representative will re-estimate your repair and will contact you for authorization to complete repairs. After repairs are completed and the goods have been returned to you, Opgal will invoice you for the actual repair amount.

NOTE
Do not attempt to disassemble the sealed case of your Opgal EyeCGas® Thermal Imager. If the unit is not functioning properly, return it to Opgal (as described in the Service section) for evaluation. Disassembling the unit voids all warranties.

Prior to returning your product, decontaminate and clean it to remove any hazardous or contaminated materials that may have settled on the product during use. Laws and/or shipping regulations prohibit the shipment of hazardous or contaminated materials. Products suspected of contamination will be professionally decontaminated at the customer's expense.

Warranty

Opgal warrants to the original purchaser that the EyeCGas® and all features/accessories installed in the unit are free of defects in materials and workmanship under intended use and service for a period of one (1) year from date of manufacture. Opgal's obligation under this warranty is limited to repairing or replacing, at its option, articles that are returned within the warranty period and that, after examination, are shown to Gas Leak Solution's satisfaction to be defective, subject to the following limitations:

a) Article must be returned to Opgal with shipping charges prepaid.
b) Article must not be altered from its original configuration.
c) Article must not have been misused, abused, or damaged in transport.
d) Maintenance and field replaceable items, if defective, are covered under warranty for a ninety (90) day period. These items include:
   - Batteries
   - Straps
   - Display covers
   - AC/DC adapters
   - All other parts and accessories except those installed in the EyeCGas

Opgal provides a limited lifetime warranty on the EyeCGas® outer shell. This warrants that the outer shell is free of defects in materials and workmanship under intended use and service for the original purchaser. Opgal's obligation under this warranty is limited to repairing or replacing, at Opgal's option, articles that after examination are shown to Opgal' s satisfaction to be defective, subject to the following limitations:

1. Article must not be altered from its original configuration.
2. Article must not have been misused, abused, or damaged in transport.
3. When the outer shell is obsolete and Opgal no longer stocks the part, the limited lifetime warranty will be terminated.

In no event shall Opgal be responsible for damages, loss of use, or other indirect, incidental, consequential or special costs, expenses or damages incurred by the purchaser, notwithstanding that Opgal has been advised of the possibility of such damages.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to one (1) year from the date of manufacture.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Extended Warranty
The extended warranty has all the same terms and conditions as the one-year warranty, except it is for a period totaling two years (standard one-year warranty plus one additional year).

Appendix A - ArtSoft Installation

The installation process will install 4 main components on your computer:

1. DirectX_9.0.

2. K-Lite Codec Pack 6.9.0

3. Microsoft Dot.Net Framework 3.5.

4. The ArtSoft Application 1.0.x.x

Instructions:

During the installation you may see different screens from those shown in the manual, in the event that some of the components have already been installed in your computer.

During the "K-Lite" installation you may be asked to uninstall some components that you already have on your computer. K-Lite will replace them. It is recommended that you allow these components to be removed.

During the installation, the installer may try to access the Internet to search for updates. Ignore this action, and let the installation continue. (If an Internet browser is open, you should close it.)

If you already have Dot.Net Framework installed on your computer, then select the "Repair" option when starting the Dot.Net Framework install. An error message may appear after installing the Dot.Net Framework. Ignore this message, as the installation should still be OK.

To start the installation process, please run the installation file "Artsoft_v1.0.2.5_setup.Exe".

Step #1 ...

Setup - Artsoft
Welcome to the Artsoft Setup Wizard
This will install ArtSoft 1.0.2.5 on your computer.
It is recommended that you close all other applications before continuing.
Click Next to continue, or Cancel to exit Setup.
Next >
Cancel

Click 'Next'.

Step #2 ...

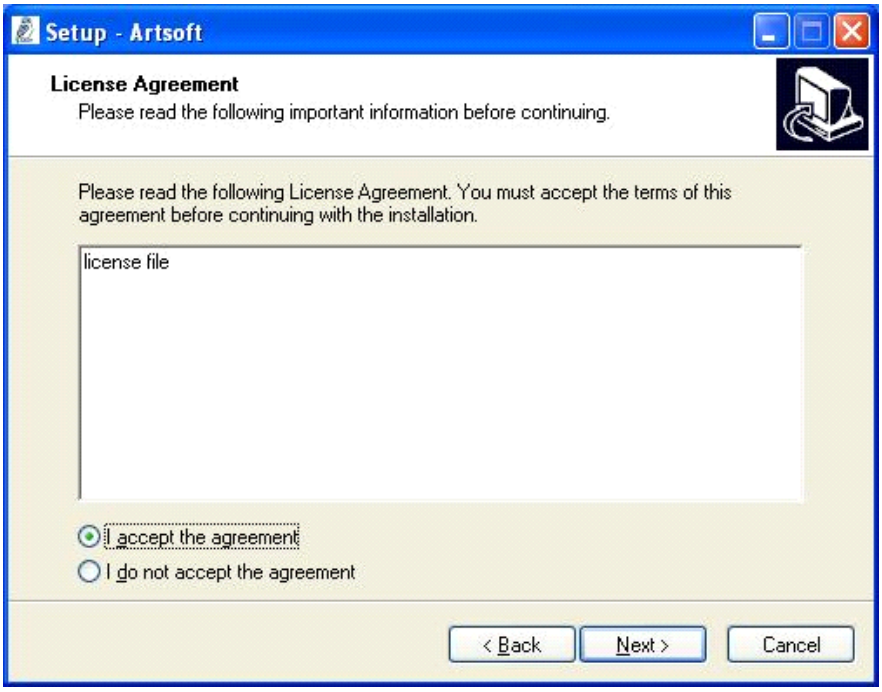
Setup - Artsoft
License Agreement
Please read the following important information before continuing.
Please read the following License Agreement. You must accept the terms of this agreement before continuing with the installation.
license file
I accept the agreement
I do not accept the agreement
< Back
Next >
Cancel

Select "I accept the agreement", then click 'Next'.

Step #3 ...

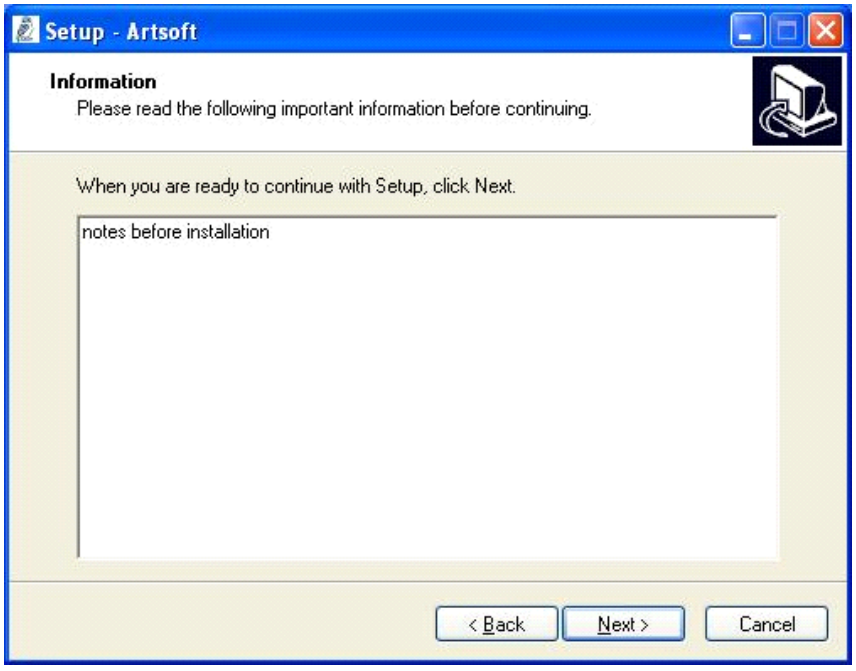
Setup - Artsoft
Information
Please read the following important information before continuing.
When you are ready to continue with Setup, click Next.
notes before installation
< Back
Next >
Cancel

Click 'Next'.

Step #4 ...

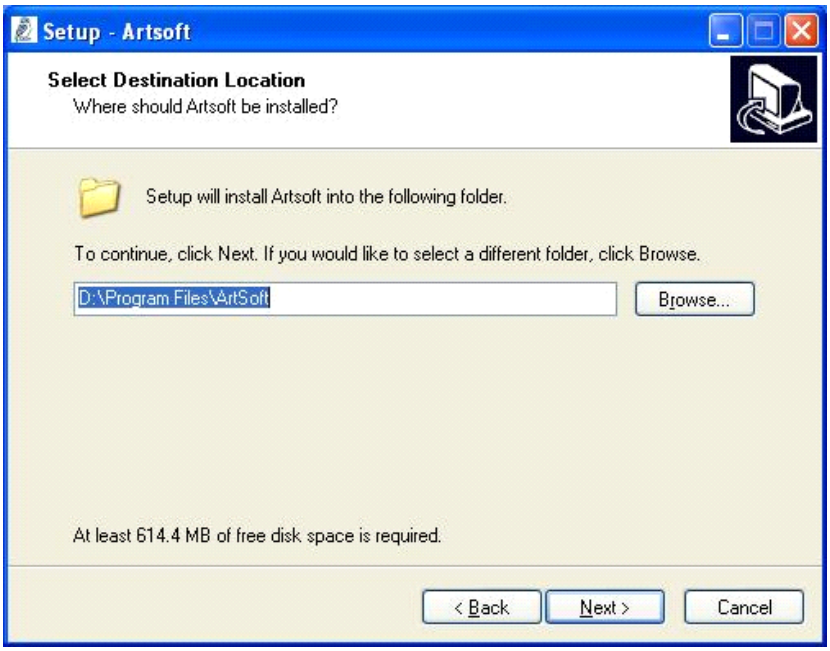
Setup - Artsoft
Select Destination Location
Where should Artsoft be installed?
Setup will install Artsoft into the following folder.
To continue, click Next. If you would like to select a different folder, click Browse.
D:\Program Files\ArtSoft
Browse...
At least 614.4 MB of free disk space is required.
< Back
Next >
Cancel

Select the location in which you wish to install the ArtSoft software, then click 'Next'.

Step #5 ...

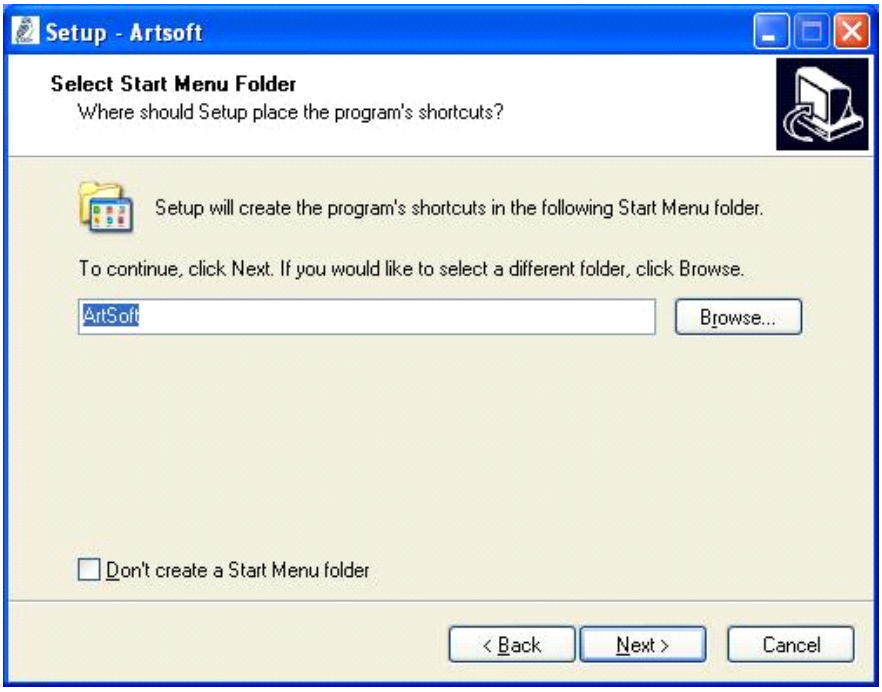
Setup - Artsoft
Select Start Menu Folder
Where should Setup place the program's shortcuts?
Setup will create the program's shortcuts in the following Start Menu folder.
To continue, click Next. If you would like to select a different folder, click Browse.
ArtSoft
Browse...
Don't create a Start Menu folder
< Back
Next >
Cancel

Select your Start Menu folder, then click 'Next'.

Step #6 ...

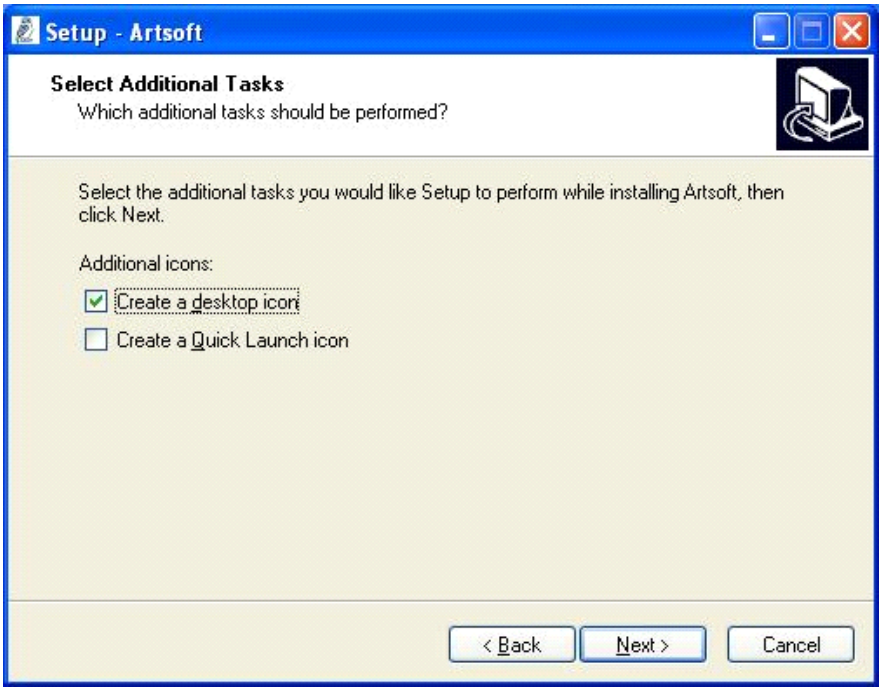
Setup - Artsoft
Select Additional Tasks
Which additional tasks should be performed?
Select the additional tasks you would like Setup to perform while installing Artsoft, then click Next.
Additional icons:
Create a desktop icon
Create a Quick Launch icon
< Back
Next >
Cancel

Select the shortcuts you wish the installation to create, then click 'Next'.

Step #7 ...

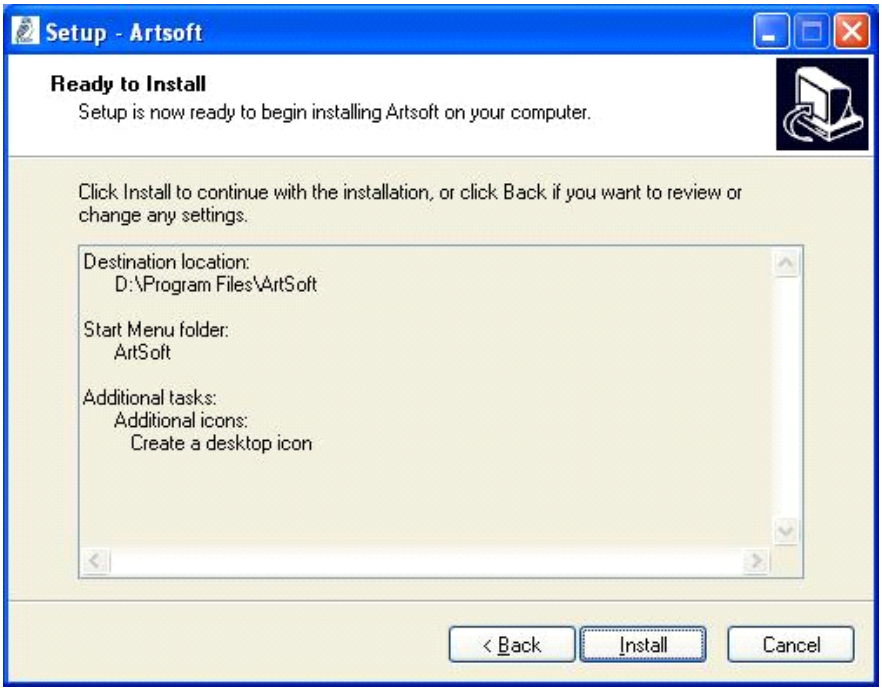
Setup - Artsoft
Ready to Install
Setup is now ready to begin installing Artsoft on your computer.
Click Install to continue with the installation, or click Back if you want to review or change any settings.
Destination location:
D:\Program Files\ArtSoft
Start Menu folder:
ArtSoft
Additional tasks:
Additional icons:
Create a desktop icon
< Back
Install
Cancel

1. Read the review before installation.
2. Click "Back" if you want to change an input or a selection you made in a previous window, or click 'Install' to start the installation.

Step #8 ...

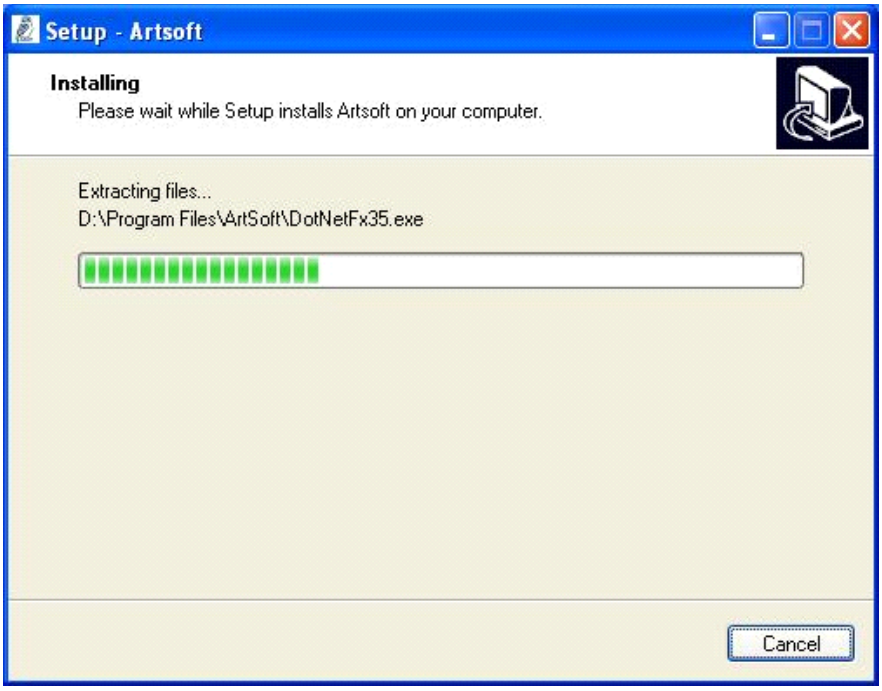

Wait while the installation is in progress.

Step #9 ...

Installing Microsoft(R) DirectX(R)
Microsoft®
DirectX®
Software Development Kit
Welcome to setup for DirectX
The DirectX setup wizard guides you through installation of DirectX Runtime Components. Please read the following license agreement. Press the PAGE DOWN key to see the rest of the agreement. You must accept the agreement to continue the setup.
MICROSOFT SOFTWARE LICENSE TERMS
MICROSOFT DIRECTX END USER RUNTIME
These license terms are an agreement between Microsoft Corporation (or based on where you live, one of its affiliates) and you. Please read them. They apply to the software named above, which includes the media on which you received it, if any. The terms also apply to any Microsoft
* updates,
I accept the agreement
I don't accept the agreement
< Back
Next >
Cancel

Select "I accept the agreement" and then click 'Next' to start installing DirectX-9.0.

Step #10 ...

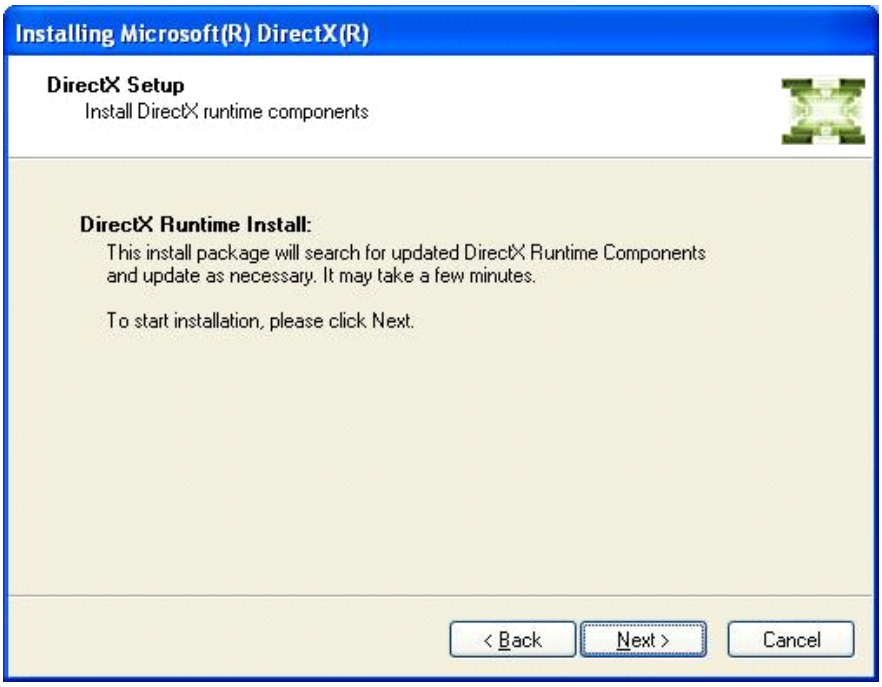
Installing Microsoft(R) DirectX(R)
DirectX Setup
Install DirectX runtime components
DirectX Runtime Install:
This install package will search for updated DirectX Runtime Components and update as necessary. It may take a few minutes.
To start installation, please click Next.
< Back
Next >
Cancel

Click "Next" to start the installation.

Step #11 ...

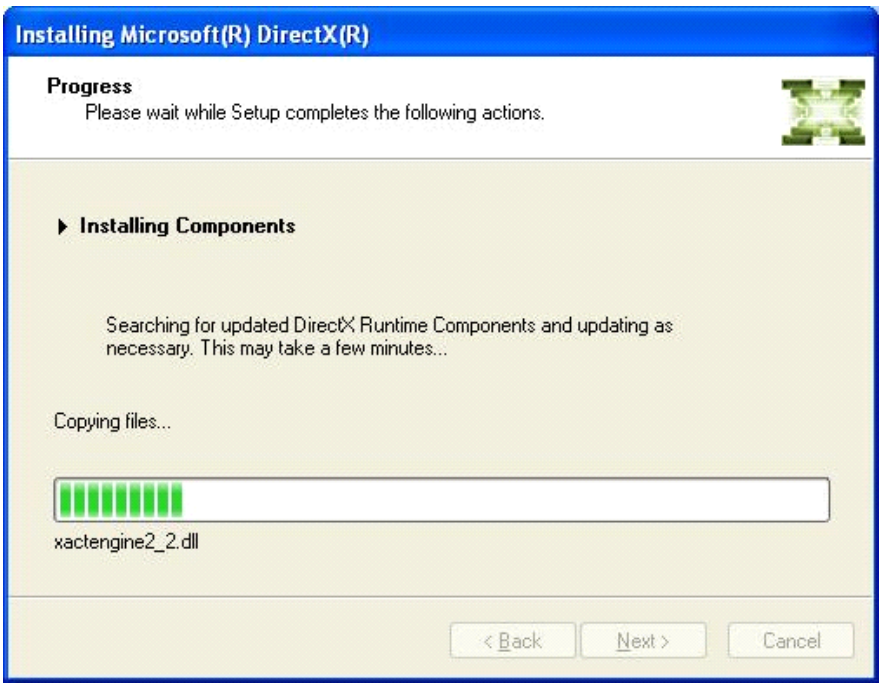
Installing Microsoft(R) DirectX(R)
Progress
Please wait while Setup completes the following actions.
Installing Components
Searching for updated DirectX Runtime Components and updating as necessary. This may take a few minutes...
Copying files...
xactengine2_2.dll
< Back
Next >
Cancel

Wait while the installation is in progress.

Step #12 ...

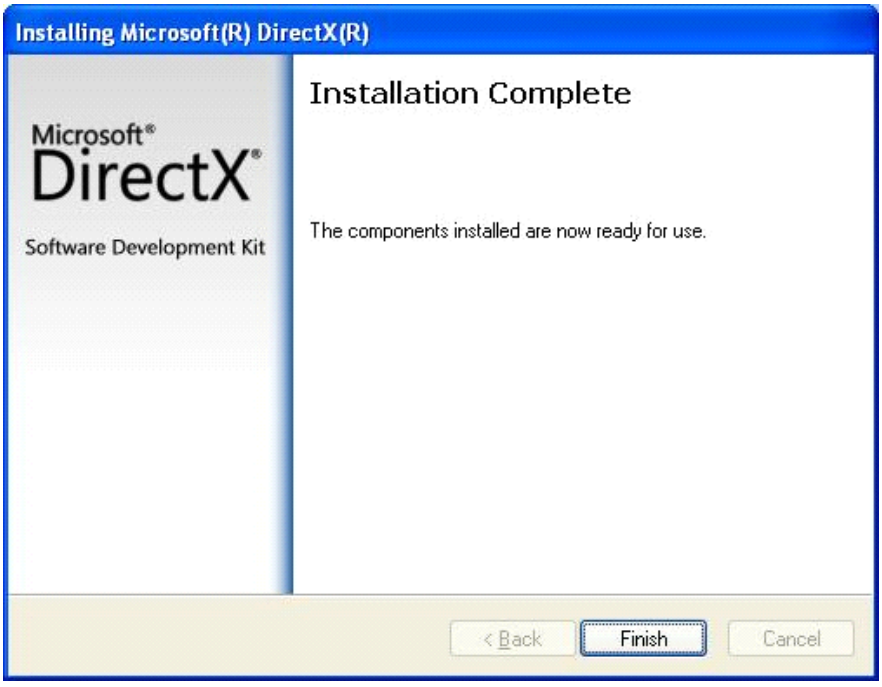

DirectX-9.0 installation is done, click 'Finish' to continue.

Step #13 ...

Setup - K-Lite Codec Pack
K-Lite Codec Pack 6.9.0 (Full)
This will install the K-Lite Codec Pack on your computer.
It is recommended that you close all other applications before continuing.
Click Next to continue, or Cancel to exit Setup.
Help
Contents
Next >
Cancel

Click 'Next' to start the K-Lite Codec Pack configuration before installation.

Step #14 ...

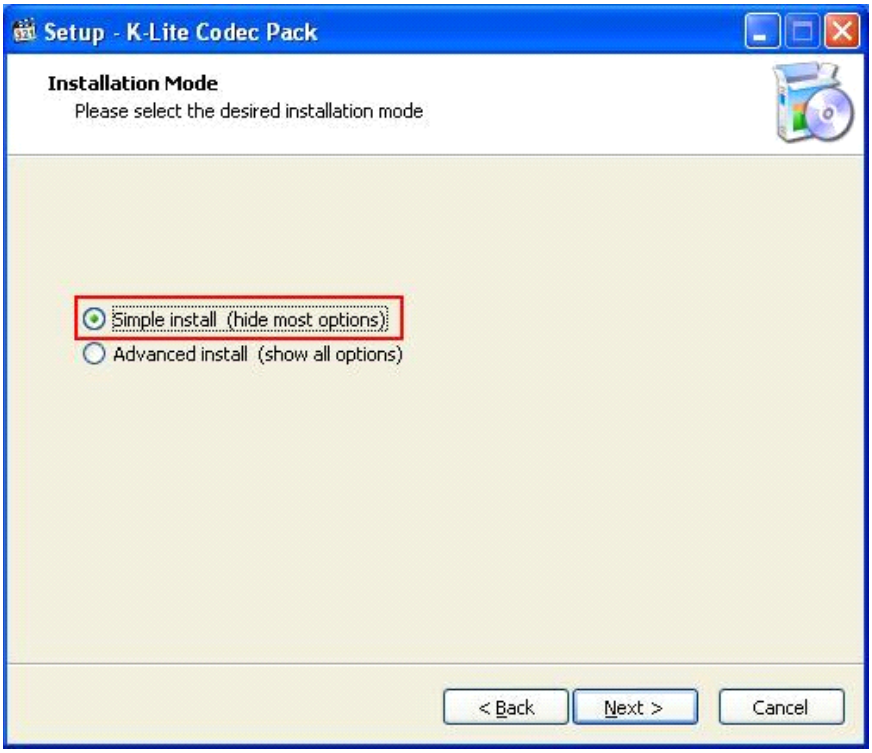
Setup - K-Lite Codec Pack
Installation Mode
Please select the desired installation mode
Simple install (hide most options)
Advanced install (show all options)
< Back
Next >
Cancel

Select the "Simple Install" option, then click 'Next'.

Step #15 ...

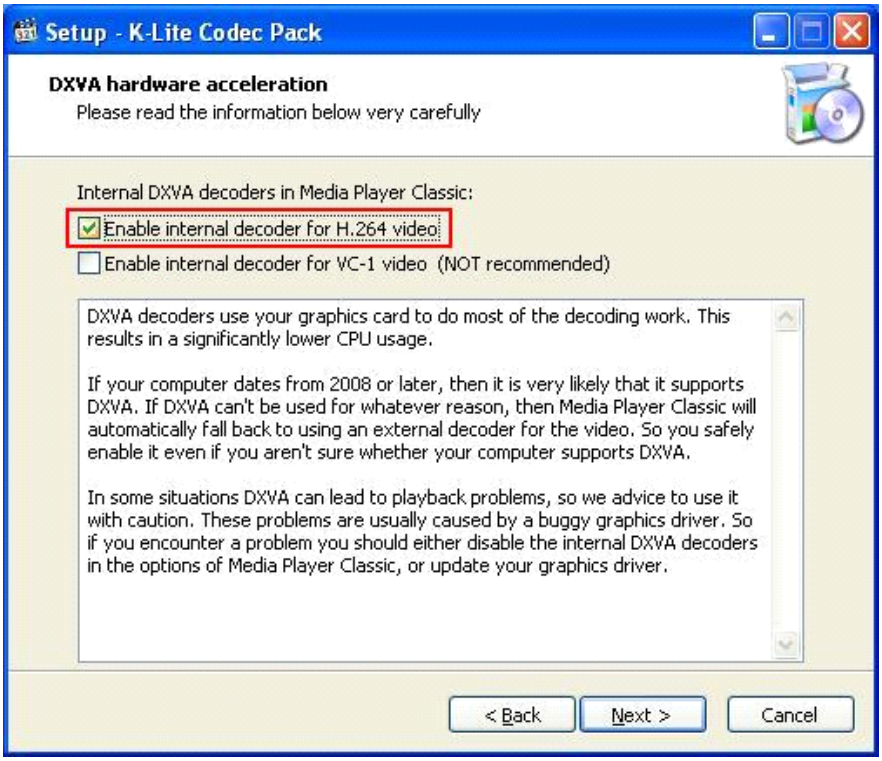
Setup - K-Lite Codec Pack
DXVA hardware acceleration
Please read the information below very carefully
Internal DXVA decoders in Media Player Classic:
Enable internal decoder for H.264 video
Enable internal decoder for VC-1 video (NOT recommended)
DXVA decoders use your graphics card to do most of the decoding work. This results in a significantly lower CPU usage.
If your computer dates from 2008 or later, then it is very likely that it supports DXVA. If DXVA can't be used for whatever reason, then Media Player Classic will automatically fall back to using an external decoder for the video. So you safely enable it even if you aren't sure whether your computer supports DXVA.
In some situations DXVA can lead to playback problems, so we advice to use it with caution. These problems are usually caused by a buggy graphics driver. So if you encounter a problem you should either disable the internal DXVA decoders in the options of Media Player Classic, or update your graphics driver.
< Back
Next >
Cancel

Make sure that the option "Enable internal decoder for H.264 video" is selected, then click 'Next' to continue.

Step #16 ...

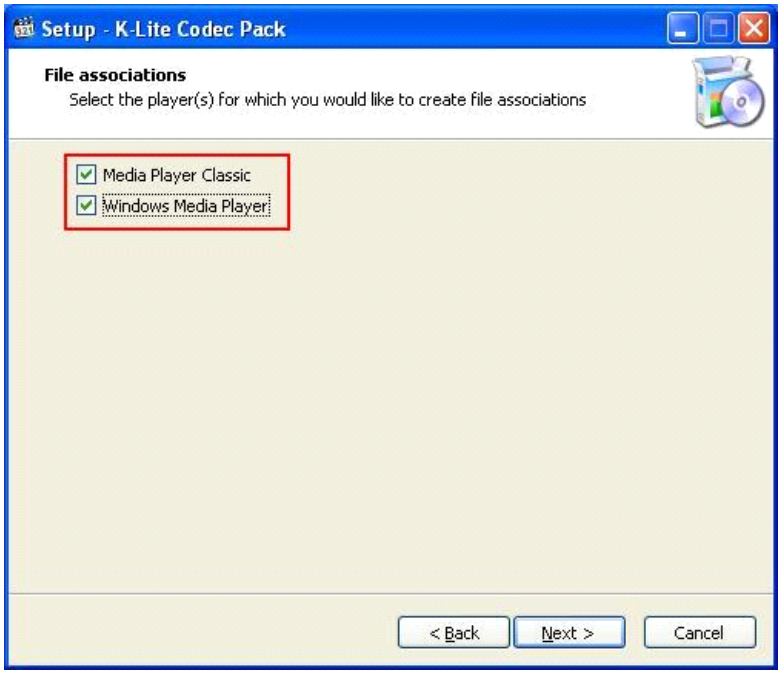
Setup - K-Lite Codec Pack
File associations
Select the player(s) for which you would like to create file associations
Media Player Classic
Windows Media Player
< Back
Next >
Cancel

Make sure that the two options ("Media Player Classic" and the "Windows Media Player") are selected, then click 'Next' to continue.

Step #17 ...

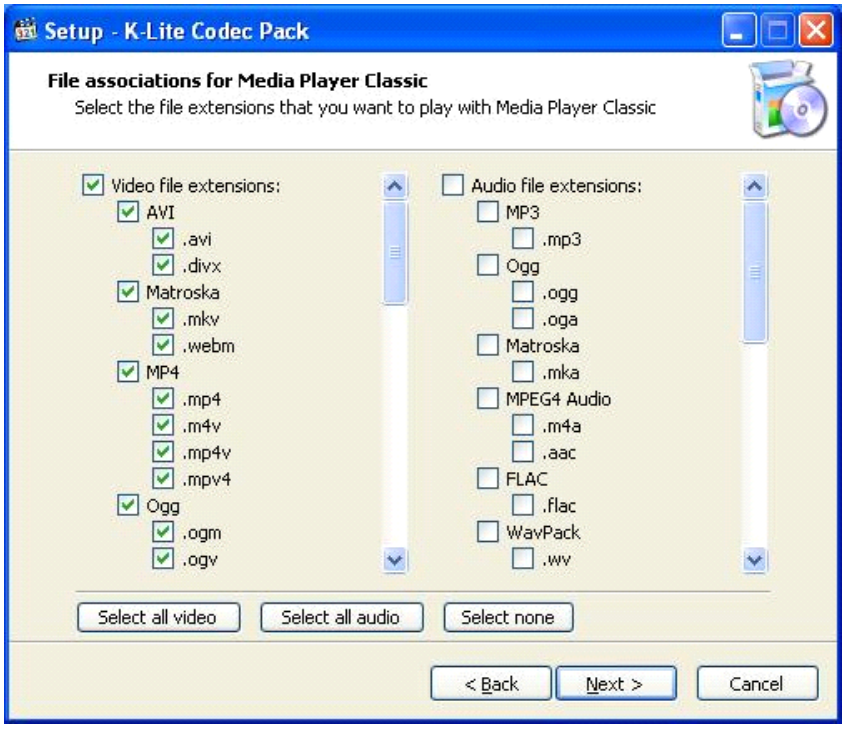

Click 'Next'.

Step #18 ...

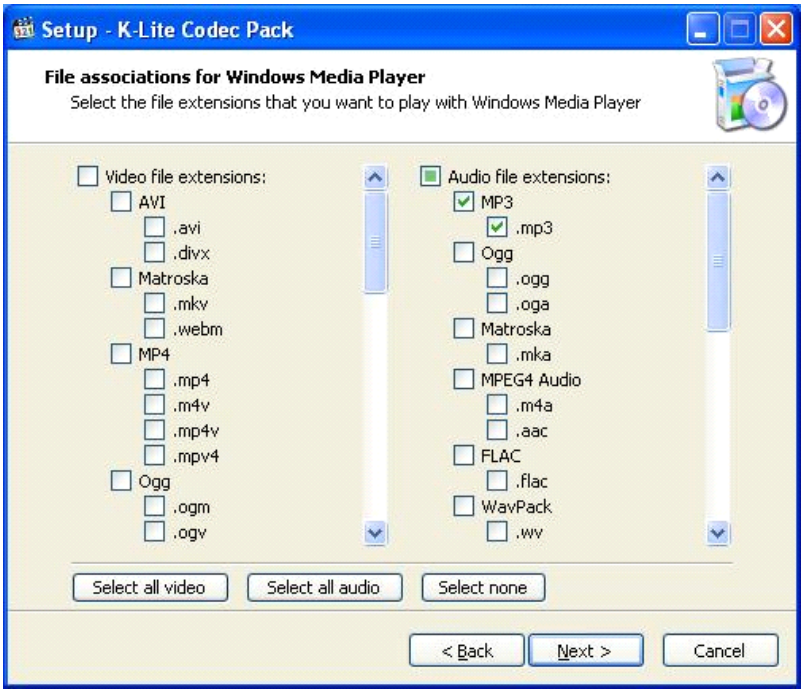

Click 'Next'.

Step #19 ...

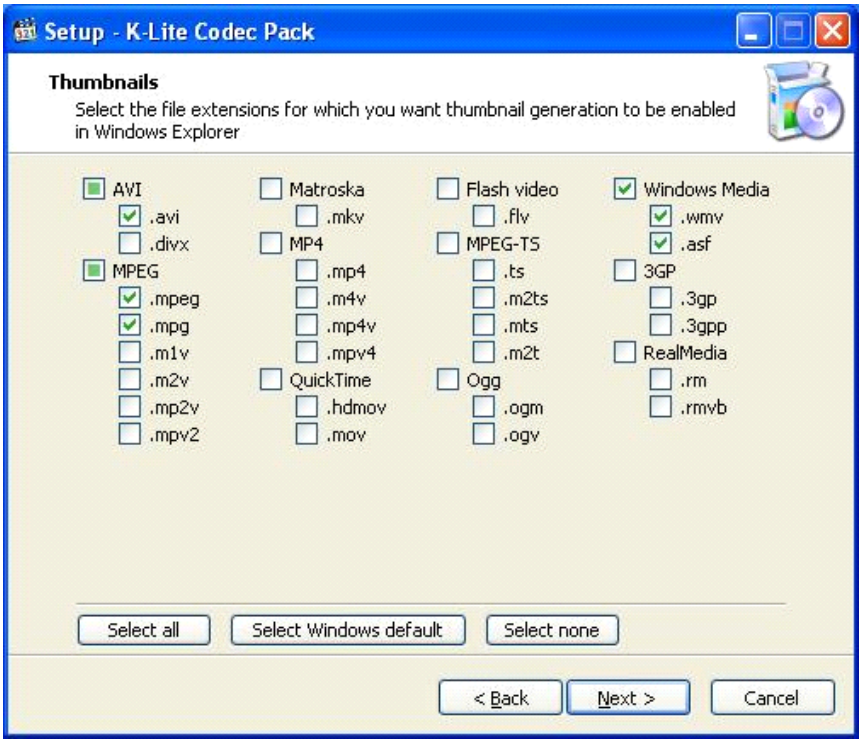

Click 'Next'.

Step #20 ...

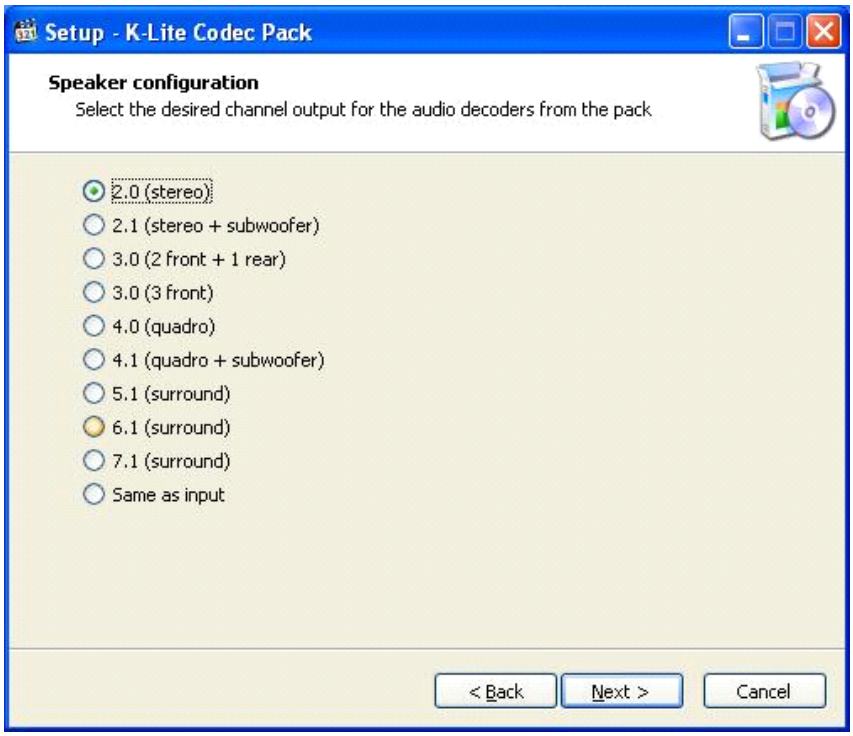

Click 'Next'.

Step #21 ...

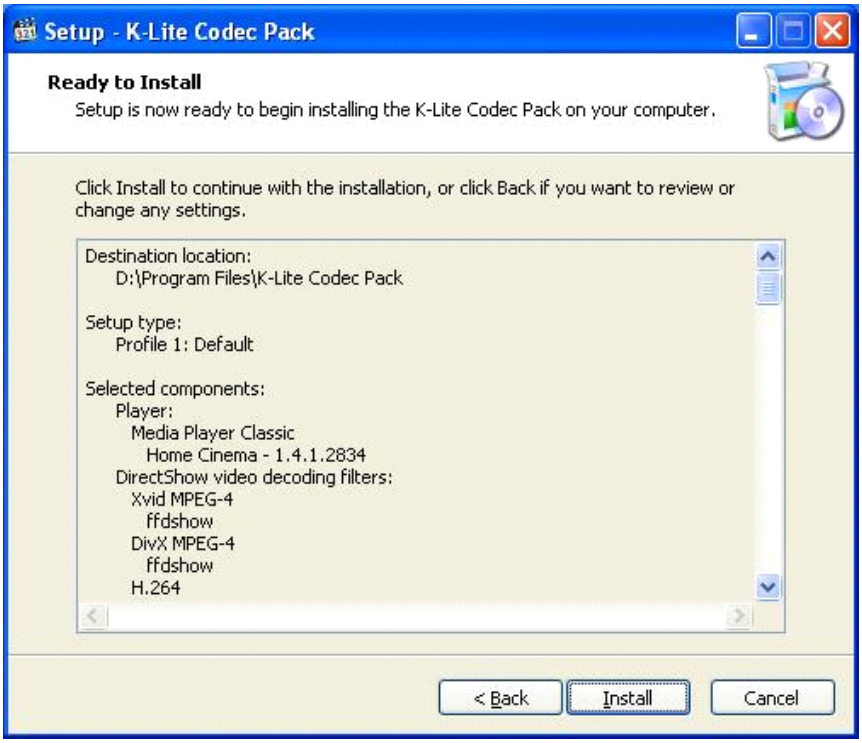

Click 'Install' to start the K-Lite Codec Pack installation.

Step #22 ...

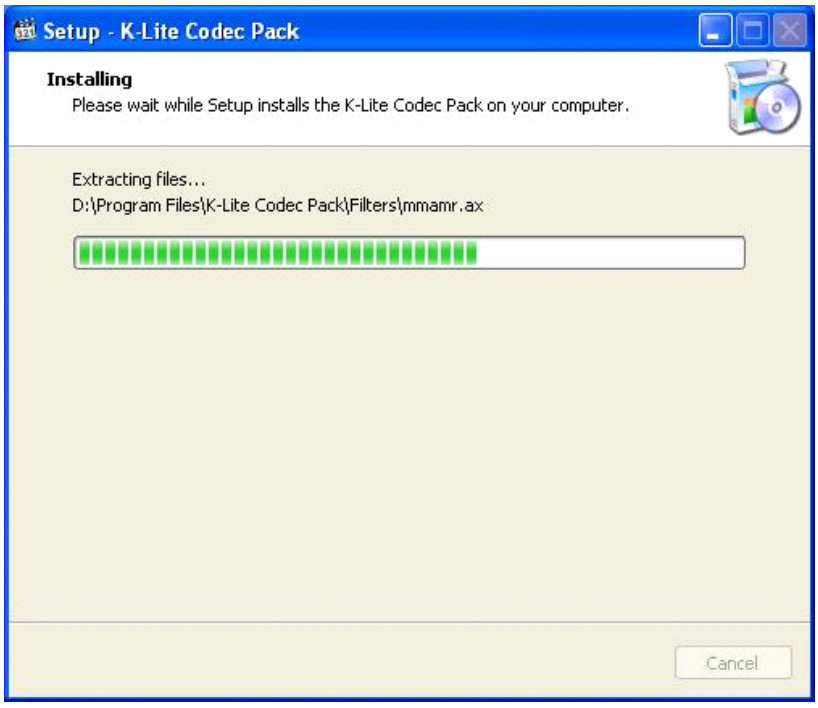
Setup - K-Lite Codec Pack
Installing
Please wait while Setup installs the K-Lite Codec Pack on your computer.
Extracting files...
D:\Program Files\K-Lite Codec Pack\Filters\mmamr.ax
Cancel

Wait while the installation is in progress.

Step #23 …

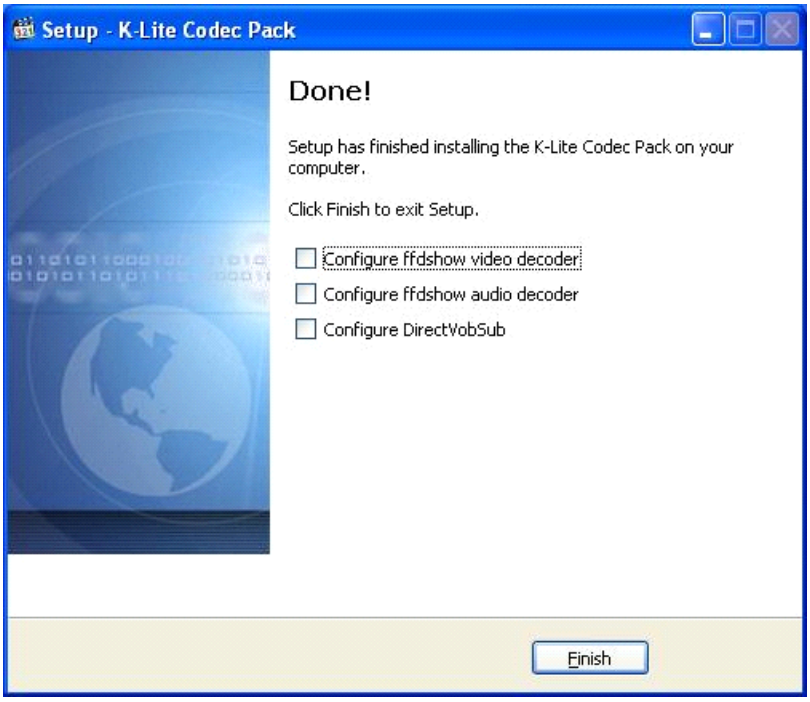
Setup - K-Lite Codec Pack
Done!
Setup has finished installing the K-Lite Codec Pack on your computer.
Click Finish to exit Setup.
Configure ffdshow video decoder
Configure ffdshow audio decoder
Configure DirectVobSub
Finish

Click 'Finish' to finish the K-Lite installation.

Step #24 …

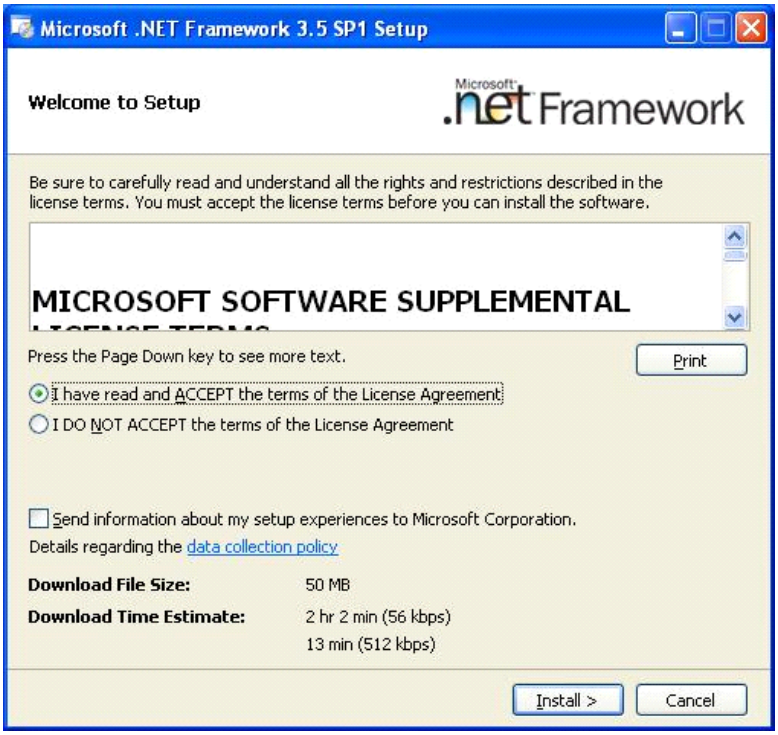
Microsoft .NET Framework 3.5 SP1 Setup
Welcome to Setup
Microsoft .net Framework
Be sure to carefully read and understand all the rights and restrictions described in the license terms. You must accept the license terms before you can install the software.
MICROSOFT SOFTWARE SUPPLEMENTAL
Press the Page Down key to see more text.
Print
I have read and ACCEPT the terms of the License Agreement
I DO NOT ACCEPT the terms of the License Agreement
Send information about my setup experiences to Microsoft Corporation.
Details regarding the data collection policy
Download File Size: 50 MB
Download Time Estimate: 2 hr 2 min (56 kbps)
13 min (512 kbps)
Install >
Cancel

Choose the option "I have read and ACCEPT the terms …" then click 'Install' to start installing the Dot.Net Framework.

If Dot.Net Framework is already installed on your computer continue to Step # 25, otherwise please go to Step # 30.

Step #25 ...

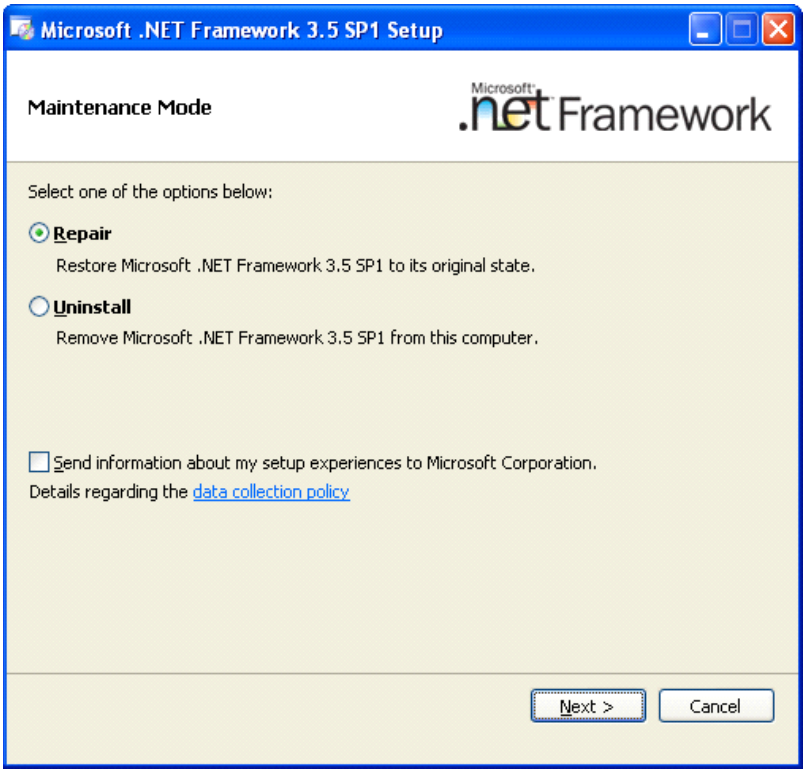
Microsoft .NET Framework 3.5 SP1 Setup
Maintenance Mode
Microsoft .net Framework
Select one of the options below:
Repair
Restore Microsoft .NET Framework 3.5 SP1 to its original state.
Uninstall
Remove Microsoft .NET Framework 3.5 SP1 from this computer.
Send information about my setup experiences to Microsoft Corporation.
Details regarding the data collection policy
Next >
Cancel

Select the "Repair" option, then click 'Next'.

Step #26 ...

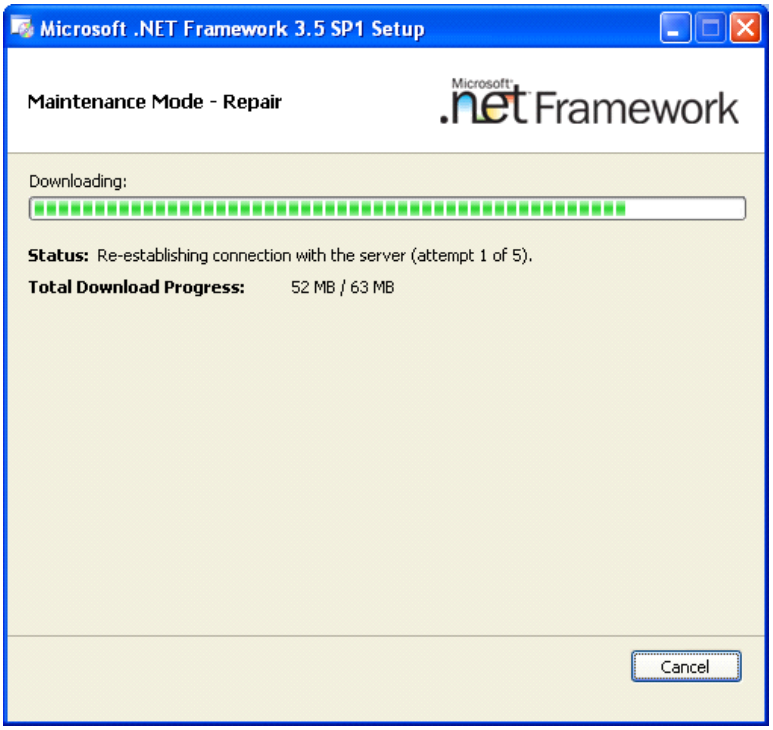
Microsoft .NET Framework 3.5 SP1 Setup
Maintenance Mode - Repair
Microsoft .net Framework
Downloading:
Status: Re-establishing connection with the server (attempt 1 of 5).
Total Download Progress: 52 MB / 63 MB
Cancel

The installer may try to connect to the internet. It will continue the installation after 5 attempts.

Step #27 ...

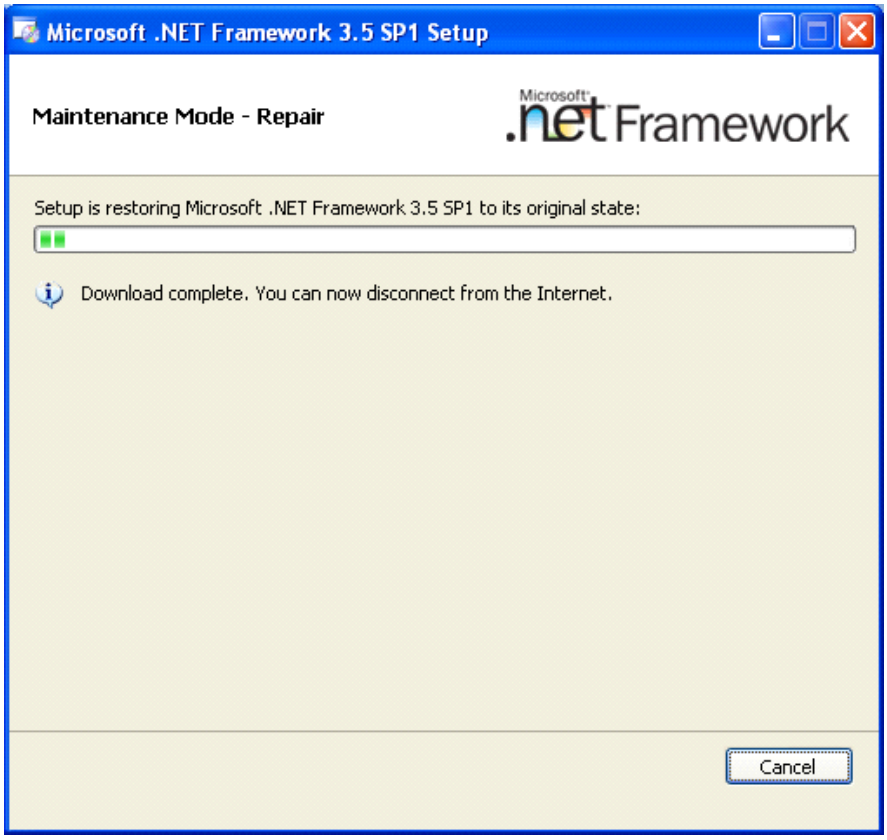
Microsoft .NET Framework 3.5 SP1 Setup
Maintenance Mode - Repair
Microsoft .net Framework
Setup is restoring Microsoft .NET Framework 3.5 SP1 to its original state:
Download complete. You can now disconnect from the Internet.
Cancel

Wait while the installation is in progress.

Step #28 ...

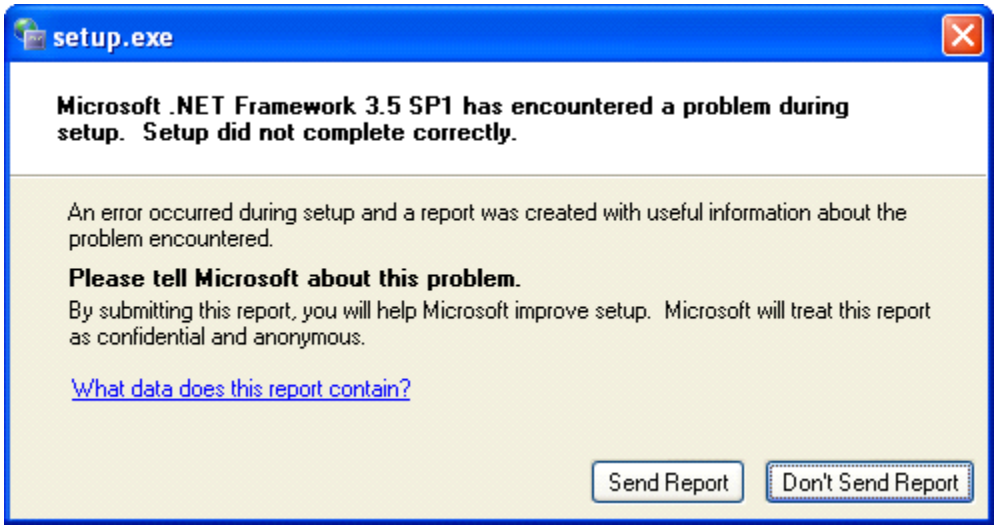
setup.exe
Microsoft .NET Framework 3.5 SP1 has encountered a problem during setup. Setup did not complete correctly.
An error occurred during setup and a report was created with useful information about the problem encountered.
Please tell Microsoft about this problem.
By submitting this report, you will help Microsoft improve setup. Microsoft will treat this report as confidential and anonymous.
What data does this report contain?
Send Report
Don't Send Report

You may get the above error message, but the install should still be OK.

Select the option which you prefer in order to continue.

Step #29 ...

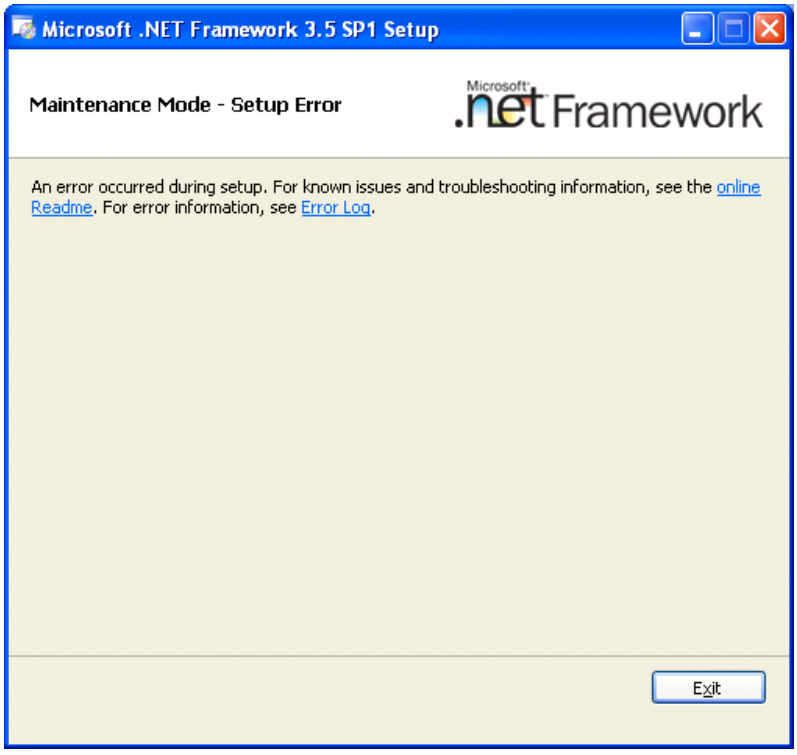
Microsoft .NET Framework 3.5 SP1 Setup
Maintenance Mode - Setup Error
Microsoft .net Framework
An error occurred during setup. For known issues and troubleshooting information, see the online Readme. For error information, see Error Log.
Exit

Click the 'Exit' button to continue the installation. Go to Step # 32.

Step #30 ...

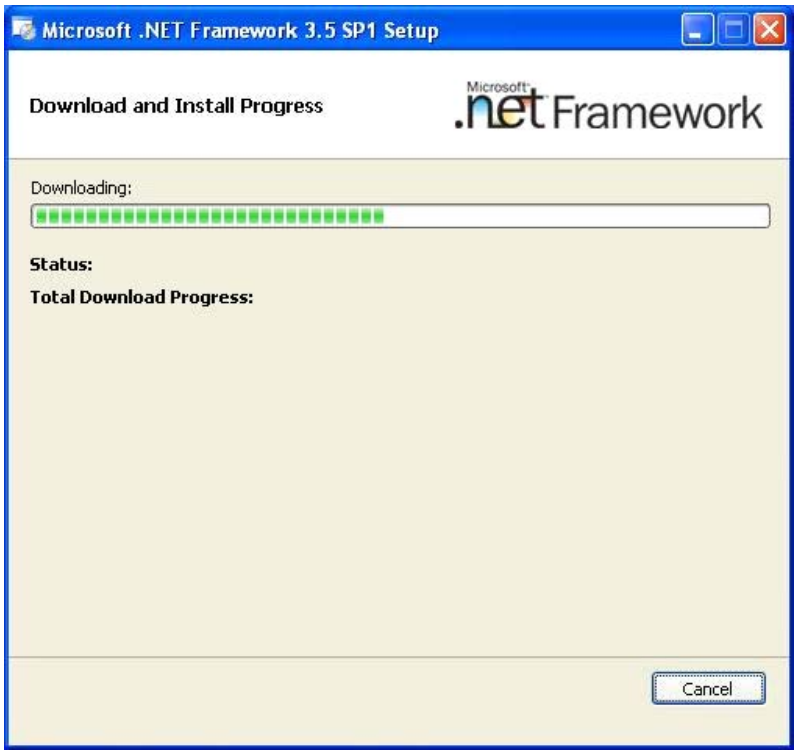

Wait while the installation is in progress.

Step #31 ...

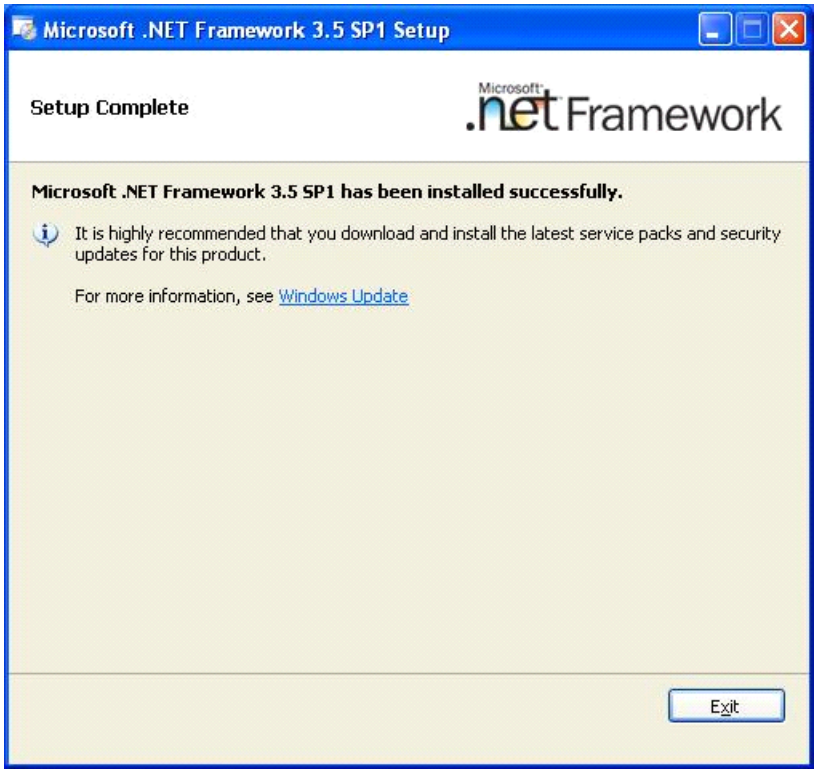
Microsoft .NET Framework 3.5 SP1 Setup
Setup Complete
Microsoft .net Framework
Microsoft .NET Framework 3.5 SP1 has been installed successfully.
It is highly recommended that you download and install the latest service packs and security updates for this product.
For more information, see Windows Update
Exit

Click 'Exit' to finish the Dot.Net Framework Installation.

Step #32 ...

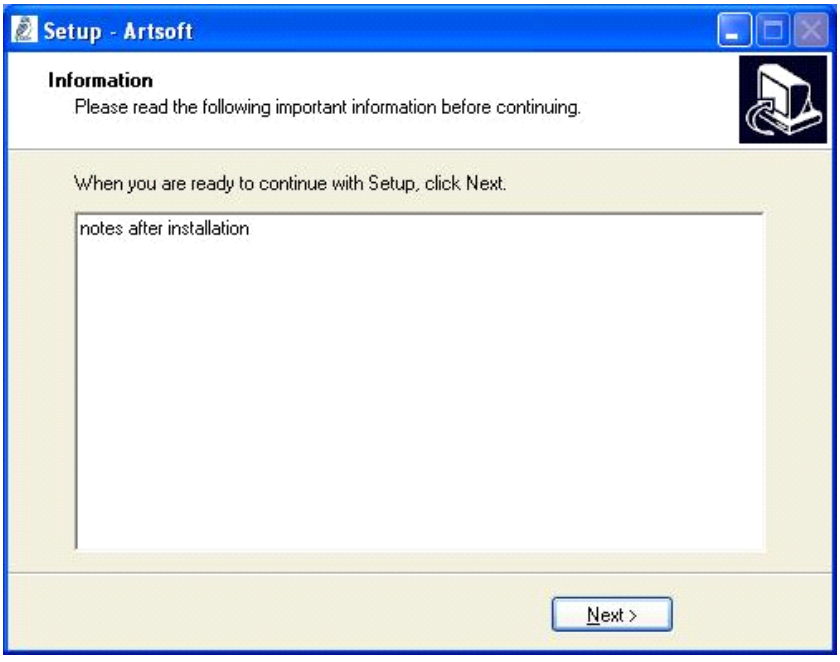
Setup - Artsoft
Information
Please read the following important information before continuing.
When you are ready to continue with Setup, click Next.
notes after installation
Next >

Click 'Next'.

Step #33 ...

You may now get now one of the following screens:

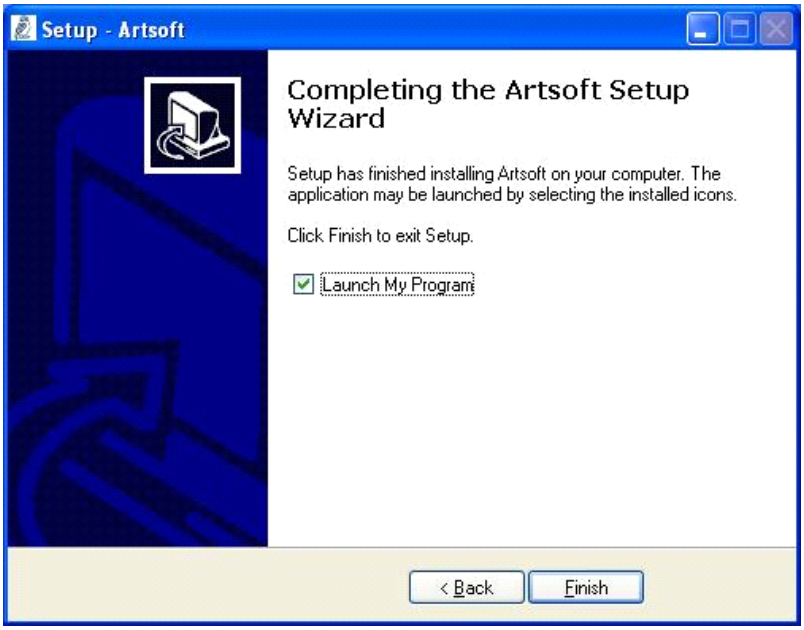
Setup - Artsoft
Completing the Artsoft Setup Wizard
Setup has finished installing Artsoft on your computer. The application may be launched by selecting the installed icons.
Click Finish to exit Setup.
Launch My Program
< Back
Finish

Check 'Launch My Program' if you want to launch the ArtSoft application now. Click 'Finish' to launch and / or finish the ArtSoft installation process.

OR -

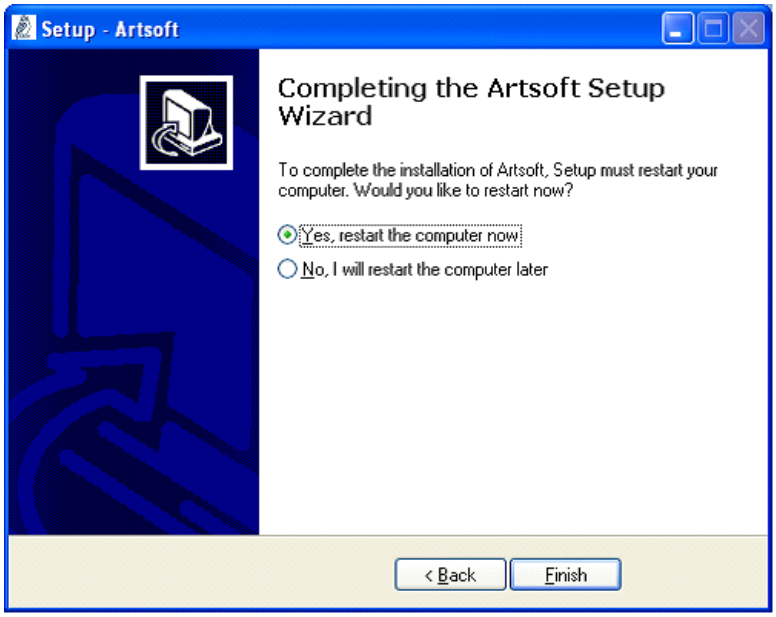
Setup - Artsoft
Completing the Artsoft Setup Wizard
To complete the installation of Artsoft, Setup must restart your computer. Would you like to restart now?
Yes, restart the computer now
No, I will restart the computer later
< Back
Finish

Select the "Yes, restart the computer now" option to finish the installation.

The 'ArtSoft' installation process is finished!

Appendix B –Specification

Imaging Performance	
Thermal Imager	
Thermal Sensitivity	20mK@ 25°C
F #	1.1
Field of View	18° with 30 mm lens
Focus near	<0.6m
Focusing	Manual
Digital Zoom	x2, x4
Digital Video Camera	
Embedded Digital Camera	VGA, fixed focus, for situational awareness
Detector	
Type	Cooled High Sensitivity , 320x240 pixels
Spectral range	3-6µm
Power Input	
Voltage	12 VDC
Power consumption	14.4 W
Battery Life	4 hours continuous
Physical Characteristics	
Weight (with battery and lens)	2.6 kg (6.6 lbs.)
Color	Grey and Black
Size in (LxHxW)	9" x 4.3" x 6.1" (230 x 110 x 130)mm
Interface	Tripod mounting UNC 1/4", rotation safe
Display	
Display Unit	3.6" Color LCD 640X480
Environmental Conditions	
Operating temperature range	-20°C to + 60°C
Storage temperature range	-40° to + 70°C
Temperature and Humidity	IEC 60068-2-30 Temp. +25°C / +40°C Humidity 95% RH
EMC/ EMI	FCC 47 CFR part 15 subpart B - Radiated Emissions EN 610000-6-4 : 2007 class A - Radiated Emissions EN 610000-6-2 : 2005 class A - Immunity to Electrostatic Discharge (ESD) EN 610000-6-2 : 2005 class A - Radiated Immunity to RFE EN 610000-6-2 : 2005 class A - Radiated Immunity to Power Frequency magnetic field
Vibration	2.4 GRMS Random Vibration
Water and Dust Protection	IP66 - Blowing Dust test IP66 - Jetting Water
HALT - High Accelerated Life Test	Vibration level: Max temp : 55 deg, Min temp : -20 deg
Safety	EN60950-1:2006
Safety	UL1604, Electrical Equipment for Use in Class I and II, Division 2, and Class III (Classified) Locations. CSA C22.2 No. 213-M1987, Non Incendive Electrical Equipment for Use in Class I, Division 2 Hazardous Locations. ANSI/ISA-12.12.01 - Non-incendive Electrical Equipment for Use in Class I and II, Division 2, and Class III Hazardous (Classified) Locations. 2011 edition. ATEX II 3G Ex nL IIC T6
Environmental Conditions when Packed in Carrying Case	
Free Fall (Drop) Test	ASTM-D 4169-06 Schedule A
Loose cargo vibration Test	ASTM-D 4169-08 Schedule F Test method D999
Vibration	ASTM-D 4169-08 Schedule F Test method D999
Gas Leak Detection Performance	
Operation features	Auto Mode and Enhanced Mode
Designed for detection of	Ethylene, 1-Hexane, Propanal, 1,3-Butadiene, 1-Butene, Methane, Propylene 1-pentene, Styrene, Toluene, Acetic acid, Xylene, 1,2-dimethyl-Benzene, Isobutylene , Isoprene, Benzene, Ethyl benzene, Ethylene oxide, Hexane, Methanol, Propylene oxide, Propylene, Ethane, Octane, Heptane, Isopropyl alcohol, MEK Methyl Ethyl Ketone 2-butanone, Propane, Butane, Pentane
Digital Video and Audio Recording	
Video and Audio recording	Digital recorder build-in with connection to PC via USB 2.
Storage Capacity	Up to 8 hours of MPEG4/H.264 in ENH mode of video & audio recording in a 16 Gbyte SD card (Built in)
Others Features	
Connectivity	Bluetooth, USB 2
Supplied Accessories	
	Battery Set (3), Tri Battery Charger, USB Cable, Headset, Neck strap, Glare Shield, Carrying Case
OPTIONAL ACCESSORIES	
	76mm f#1.2 Lens - FOV 7.3°x 5.6°- P/N 8G9T7600A

Appendix C – Procedure for changing Battery in Field

- Press on the Menu button for 3 seconds and release, the EyeCGas® camera will close.
- Disconnect the battery from the EyeCGas® camera.
- Connect the new battery and ensure it is in place and that the holding flange of the battery is secured to the EyeCGas® camera.
- Press the Menu button for 1 second and verify the EyeCGas® unit is initializing.

Appendix D – Procedure for changing Lens in Field

- Press on the Menu button for 3 seconds and release, the EyeCGas® camera will close.
- Disconnect the Lens from the EyeCGas® camera by pressing on the quick release latch on the Lens and turning it CCW to its releasing position.
- Connect the new Lens and lock it in the position, make sure it is secured.
- Press the Menu button for 1 second and verify the EyeCGas®s unit is initializing.

Appendix E - Certifications

This equipment is suitable for use as certified as follows:

- UL1604, Electrical Equipment for Use in Class I and II, Division 2, and Class III (Classified) Locations.
- CSA C22.2 No. 213-M1987, Non Incendive Electrical Equipment for Use in Class I, Division 2 Hazardous Locations.
- ANSI/ISA-12.12.01 - Non incendive Electrical Equipment for Use in Class I and II, Division 2 and Class III Hazardous (Classified) Locations.
- ATEX II 3G Ex nL IIC T6.